

Ovation

B-2805FC

User Manual




CHAUVET
PROFESSIONAL

EDITION NOTES

The Ovation B-2805FC User Manual includes a description, safety precautions, installation, programming, operation and maintenance instructions for the Ovation B-2805FC as of the release date of this edition.

Trademarks

CHAUVET, the Chauvet logo and Ovation B-2805FC are registered trademarks or trademarks of Chauvet & Sons, LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

Copyright Notice

The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

© **Copyright 2016 Chauvet & Sons, LLC. All rights reserved.**

Electronically published by Chauvet in the United States of America.

Manual Use

Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

Document Printing

For best results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure the printer to scale the content accordingly.

Intended Audience

Any person installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions. Download the latest version from www.chauvetprofessional.com.

Document Revision

This Ovation B-2805FC User Manual is the 1st edition of this document. Go to www.chauvetprofessional.com for the latest version.

TABLE OF CONTENTS

1. Before You Begin	1
What Is Included	1
Claims	1
Manual Conventions	1
Symbols	1
Safety Notes.....	2
Personal Safety	2
Mounting and Rigging	2
Power and Wiring.....	2
Operation	2
Expected LED Lifespan.....	2
2. Introduction	3
Description	3
Features.....	3
Product Overview.....	3
Product Dimensions.....	4
3. Setup	5
AC Power.....	5
AC Plug.....	5
Power Linking.....	5
Signal Connections	5
DMX Connection	5
Art-Net™ Connection.....	5
sACN Connection.....	5
Connection Diagram	6
Remote Device Management (RDM).....	6
Master/Slave Connectivity.....	6
Mounting	7
Orientation.....	7
Rigging.....	7
Procedure.....	7
Mounting Diagram	7
4. Operation	8
Control Panel Operation.....	8
Programming.....	8
Menu Map	8
Configuration (DMX/Art-Net™/sACN).....	12
Control Protocol	12
Ethernet Setting	12
Universe	12
IP Address	12
Control Personalities.....	12
Starting Address.....	13
DMX Values	13
10-Cell Personalities	13
10-Cell RGBAL FULL 135CH	13
10-Cell RGBAL Fine 100CH.....	17
10-Cell RGBAL EXT 83CH.....	19
10-Cell RGBA EXT 73CH.....	22
10-Cell RGB EXT 63CH	24
10-Cell RGBAL 50CH.....	26

10-Cell RGBA 40CH	27
10-Cell RGB 30CH	28
5-Cell Personalities	29
5-Cell RGBAL FULL 70CH	29
5-Cell RGBAL Fine 50CH	31
5-Cell RGBAL EXT 43CH	32
5-Cell RGBA EXT 38CH	34
5-Cell RGB EXT 33CH	35
5-Cell RGBAL 25CH	36
5-Cell RGBA 20CH	37
5-Cell RGB 15CH	37
2-Cell Personalities	38
2-Cell RGBAL FULL 31CH	38
2-Cell RGBAL Fine 20CH	39
2-Cell RGBAL EXT 19CH	39
2-Cell RGBA EXT 17CH	40
2-Cell RGB EXT 15CH	40
2-Cell RGBAL 10CH	41
2-Cell RGBA 8CH	41
2-Cell RGB 6CH	41
1-Cell Personalities	42
1-Cell RGBAL FULL 17CH	42
1-Cell RGBAL Fine 10CH	42
1-Cell RGBAL EXT 10CH	43
1-Cell RGBA EXT 9CH	43
1-Cell RGB EXT 8CH	43
1-Cell RGBAL 5CH	44
1-Cell RGBA 4CH	44
1-Cell RGB 3CH	44
1-Cell DMX-VCW-CCT 3CH	44
Virtual Color Wheel	45
Virtual Color Wheel Chart	45
Preset Color Temperature Chart	46
Configuration (Standalone)	46
Static Mode	46
Virtual Color Wheel	46
Color Temperature	46
Manual Color Mixer	46
Auto Programs	46
Master/Slave	47
Dimmer Profiles	47
White Balance	47
LED Frequency	47
Fan Mode	47
Display Orientation	47
Back Light	48
System Information	48
Factory Reset	48
Web Server	48
Home	48
Settings	48
Output	48
Security	48

TABLE OF CONTENTS

5. Technical Information	49
Product Maintenance	49
6. Technical Specifications	50
7. Returns	52
8. Contact Us	53

1. BEFORE YOU BEGIN

What Is Included

- Ovation B-2805FC
- Neutrik® powerCON® Power Cord
- Wall Washing Filter
- Warranty Card
- Quick Reference Guide

Claims

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

Manual Conventions

CONVENTION	MEANING
1–512	A range of values
50/60	A set of values of which only one can be chosen
<SET>	A button on the product’s control panel
Settings	A product function or a menu option

Symbols

SYMBOL	MEANING
	Electrical warning. Not following these instructions may cause electrical damage to the product, accessories, or the user.
	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.



Any reference to power connections in this manual assumes the use of Neutrik® powerCON® cables.



The term “DMX” used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.

Safety Notes

Read all the following safety notes before working with this product. These notes contain important information about the installation, usage, and maintenance of this product.



This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained, certified technicians. Do not open the housing or attempt any repairs.



All applicable local codes and regulations apply to proper installation of this product.

Personal Safety

- Avoid direct eye exposure to the light source while the product is on.
- Always disconnect the product from the power source before cleaning or replacing the fuse.
- Always connect the product to a grounded circuit to avoid the risk of electrocution.
- Do not touch the product's housing when operating because it may be very hot.

Mounting and Rigging

- This product is not intended for permanent installation.
- This product is for indoor use only! To prevent risk of fire or shock, do not expose this product to rain or moisture. (IP20)
- CAUTION: When transferring product from extreme temperature environments, (e.g. cold truck to warm humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow product to fully acclimate to the surrounding environment before connecting it to power.
- Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Make sure there are no flammable materials close to this product while it is operating.
- When hanging this product, always secure to a fastening device using a safety cable.
- Never carry the product by the power cord.

Power and Wiring

- Make sure the power cord is not crimped or damaged.
- Always make sure you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.
- Never connect this product to a dimmer pack or rheostat.
- Make sure to replace the fuse with another of the same type and rating.
- Never disconnect this product by pulling or tugging on the power cable.

Operation

- Do not operate this product if there is damage on the housing, lenses, or cables. Have the damaged parts replaced by an authorized technician at once.
- Do not cover the ventilation slots when operating to avoid internal overheating.
- The maximum ambient temperature is 113 °F (45 °C). Do not operate the product at higher temperatures.
- In the event of a serious operation problem, stop using this product immediately!



If your Chauvet product requires service, contact Chauvet Technical Support.

Expected LED Lifespan

LEDs gradually decline in brightness over time, primarily because of heat. LEDs that are arranged in clusters experience higher operating temperatures than single LEDs. For this reason, operating clustered LEDs at their fullest intensity significantly reduces the LEDs' lifespan. Under normal conditions, this lifespan is 40,000 to 50,000 hours. If extending this lifespan is vital, lower the operating temperature by improving the ventilation around the product, thus reducing the ambient temperature. In addition, limiting the overall projection intensity may extend the LEDs' lifespan.

2. INTRODUCTION


Description

The Ovation B-2805FC is a high-power full color LED (RGBAL) batten. It features full RGBA-Lime color mixing with modes providing full 16-bit dimming for up to 10 cells, selectable PWM, RDM, Art-Net™, and sACN. The Virtual Color Wheel matches popular gel colors comparable to those projected by a tungsten source, in addition to color temperature presets that match a tungsten source from 2800 to 6500 K. Enhance the product's wall-washing ability with the included holographic filter.


Features

- Full Color LED (RGBAL) batten fixture for theatre, film and production
- Theatre-ready with 16-bit dimming of master dimmer and individual colors
- Multiple control personalities for complex programming schemes up to 10 sections of control
- Included holographic filter for use in cyc lighting or wall grazing applications for ultra-smooth color mixing
- Virtual Color wheel with color matched to popular Rosco Gel colors
- Art-Net™, sACN, 3- and 5-pin DMX and RDM (Remote Device Management) for added control flexibility
- Neutrik® powerCON® and Amphenol etherCON® compatible connections for power and data linking
- Adjustable PWM (Pulse Width Modulation) to avoid flickering on camera
- Nearly silent operation for use in studio and theatre applications

Product Overview

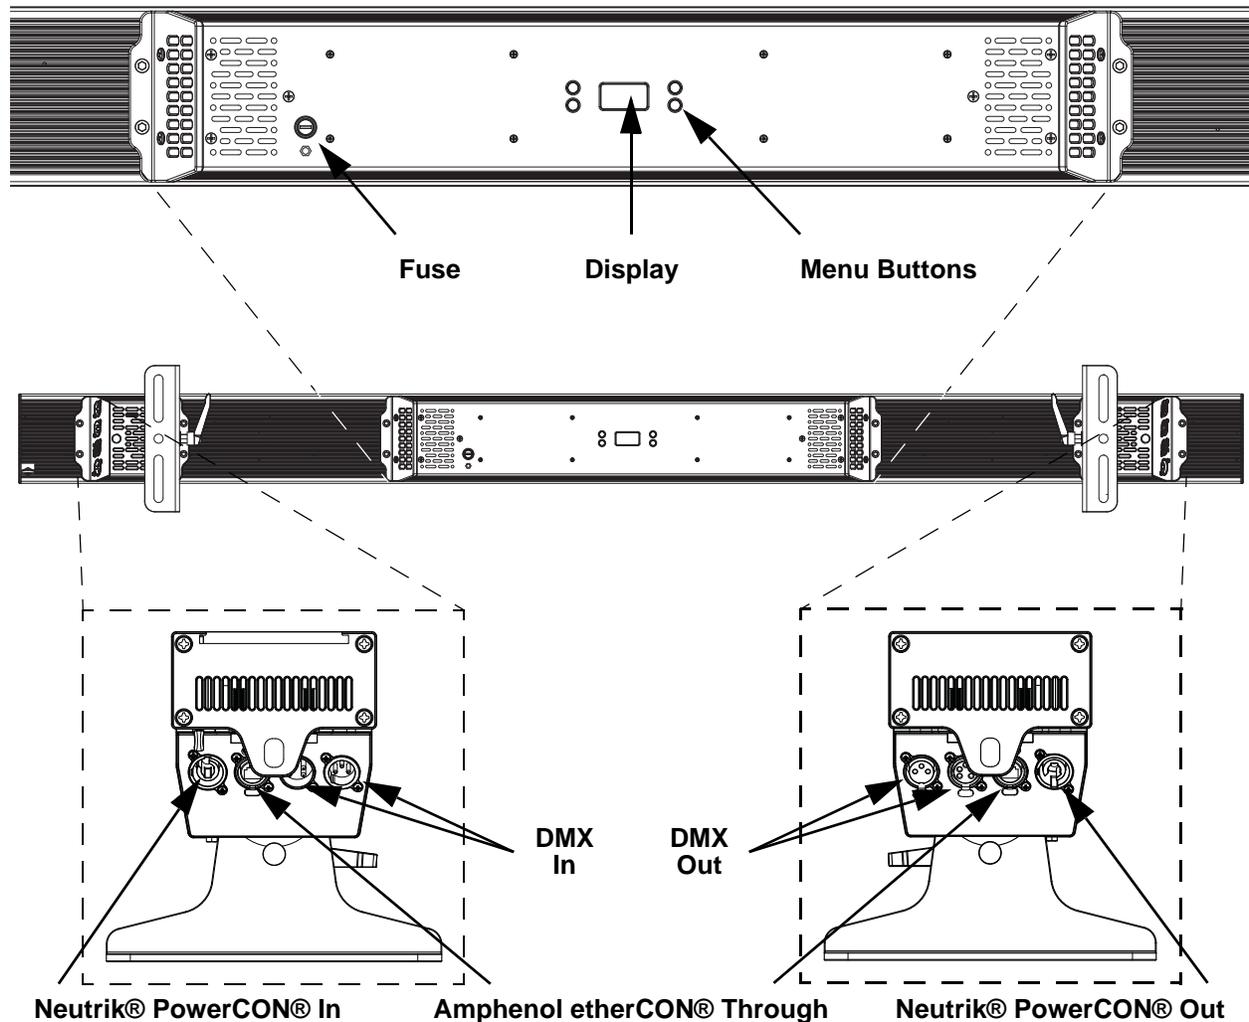

Product Dimensions

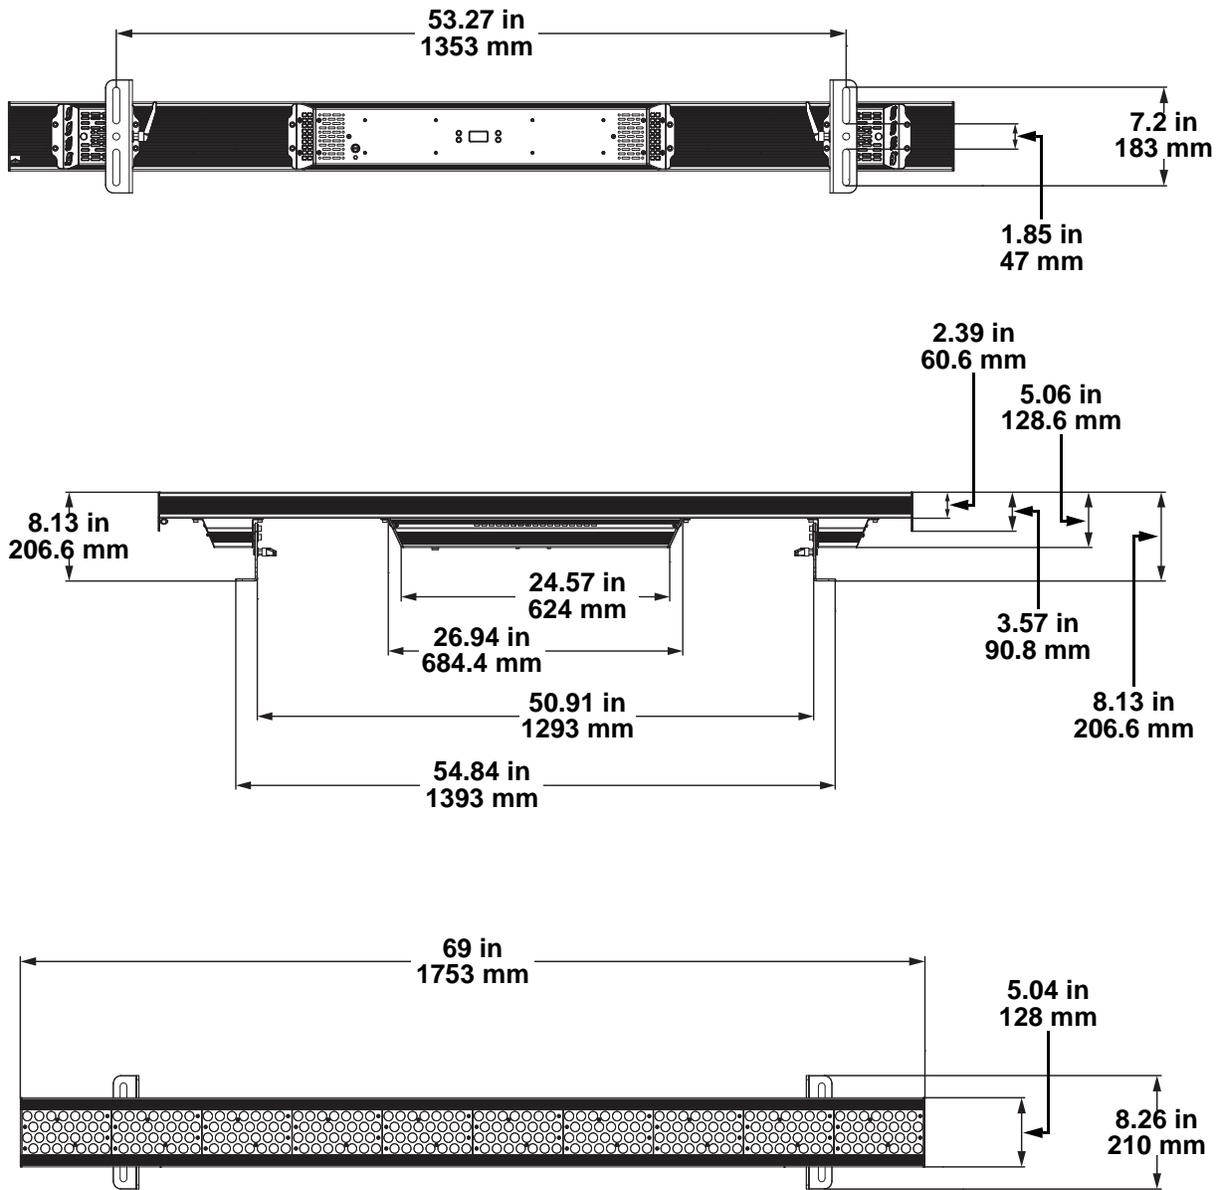

3. SETUP

AC Power

Each Ovation B-2805FC has an auto-ranging power supply that works with an input voltage range of 100 to 240 VAC, 50/60 Hz. To determine the power requirements for each Ovation B-2805FC, refer to the label affixed to the product. You can also refer to the Technical Specifications chart in this manual.

The listed current rating indicates the maximum current draw during normal operation. For more information, download Sizing Circuit Breakers from the Chauvet website: www.chauvetprofessional.com.



- **Always connect the product to a protected circuit (circuit breaker or fuse). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.**
- **To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.**



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

AC Plug

The Ovation B-2805FC comes with a power input cord terminated with a Seetronic Powerkon A connector on one end and an Edison plug on the other end (U.S. market). If the power input cord that came with your product has no plug, or if you need to change the plug, use the table below to wire the new plug.

CONNECTION	WIRE (U.S.)	WIRE (EUROPE)	SCREW COLOR
AC Live	Black	Brown	Yellow or Brass
AC Neutral	White	Blue	Silver
AC Ground	Green/Yellow	Green/Yellow	Green

Power Linking

The product supports power linking. You can power link up to 2 products at 120 V; up to 3 at 208 V; or up to 4 at 230 V.

This product comes with a power input cord. Power linking cables are available from Chauvet for purchase.

Signal Connections

The Ovation B-2805FC uses DMX, Art-Net™, or sACN for the 33 control personalities, ranging from 3-channel to 135-channel. The Ovation B-2805FC has 2 Amphenol etherCON® through ports and both 3- and 5-pin DMX in and out ports.

- Refer to the [Operation](#) chapter to learn how to configure the Ovation B-2805FC to work in these personalities.
- The DMX Values section provides detailed information regarding the control personalities.



If you are not familiar with or need more information about DMX standards, Master/ Slave connectivity, or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: www.chauvetprofessional.com.

DMX Connection

You can link the Ovation B-2805FC to a DMX controller using a 3- or 5-pin DMX connection. If using other DMX-compatible products with this product, you can control each individually with a single DMX controller.

Art-Net™ Connection


Art-Net™ is an Ethernet protocol that uses TCP/IP which transfers a large amount of DMX512 data using an Neutrik® etherCON® RJ45 connection over a large network. An Art-Net™ protocol document is available from www.chauvetprofessional.com.

Art-Net™ designed by and copyright Artistic Licence Holdings Ltd.

sACN Connection

Kling-Net is a network protocol that allows auto configuration of display devices using a Neutrik® etherCON® RJ45 Ethernet connection. Refer to the ArKaos software manual for detailed instructions on programming this product.

Connection Diagram

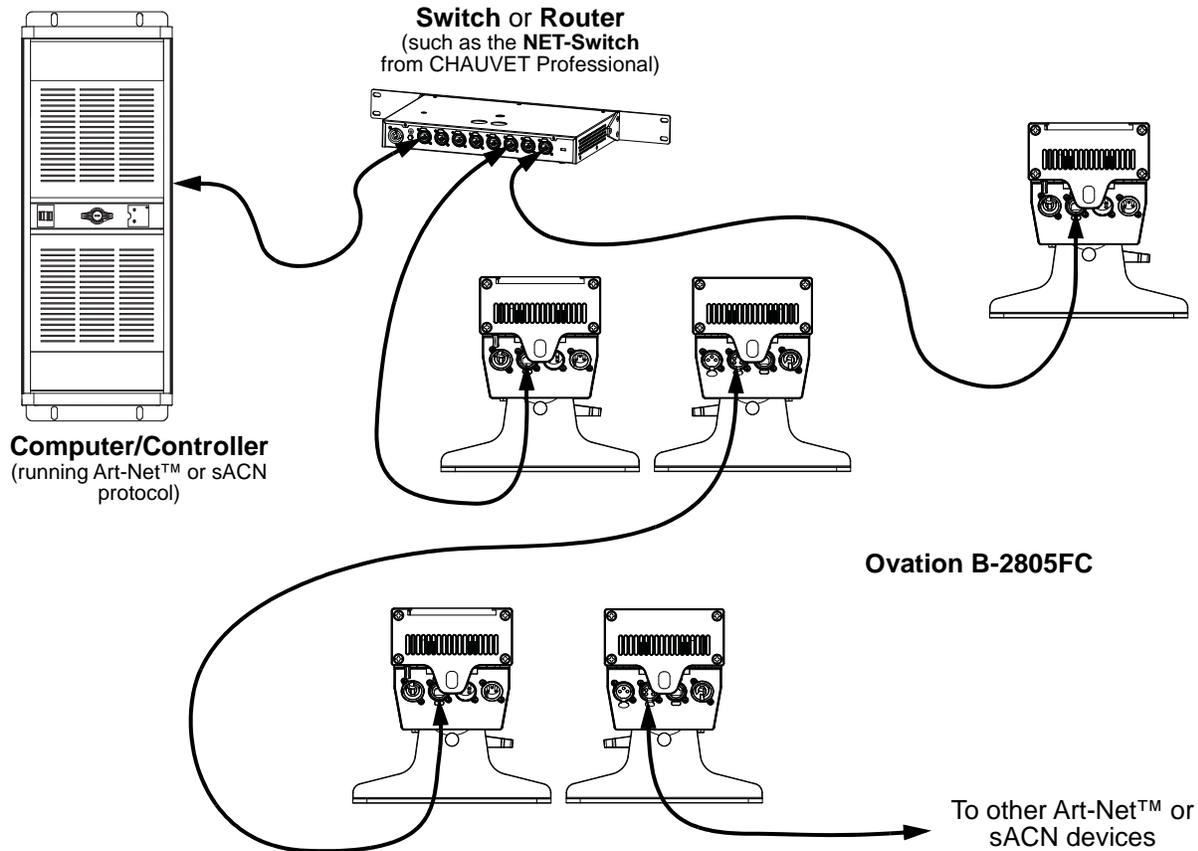

Remote Device Management (RDM)

Remote Device Management, or RDM, is a standard for allowing DMX-enabled devices to communicate bi-directionally along existing DMX cabling. Check the DMX controller's User Manual or with the manufacturer as not all DMX controllers have this capability. The Ovation B-2805FC supports RDM protocol that allows feedback to make changes to menu map options.

Master/Slave Connectivity

The Master/Slave mode allows an Ovation B-2805FC (the master) to control one or more Ovation B-2805FC products (the slaves) without a DMX controller. One Ovation B-2805FC becomes the master when running an auto program, or by being in Static mode.

You must configure each slave's control panel to operate in Slave mode. During Master/Slave operation, the slaves will operate in unison with the master.



DO NOT connect a DMX controller to products operating in Master/Slave mode. The DMX controller signals may interfere with the signals from the master.



- The [Operation](#) section of this manual provides detailed instructions on how to configure the master and slaves.
- If you are not familiar with or need more information about DMX standards, or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: www.chauvetprofessional.com.

Mounting

Before mounting the product, read and follow the safety recommendations indicated in the Safety Notes. For our CHAUVET Professional line of mounting clamps, go to <http://trusst.com/products/>.

Orientation

Always mount this product in a safe position, making sure there is adequate room for ventilation, configuration, and maintenance.

Rigging


Chauvet recommends using the following general guidelines when mounting this product.

- Before deciding on a location for the product, make sure there is easy access to the product for maintenance and programming purposes.
- Make sure that the structure onto which you are mounting the product can support the product's weight. See the [Technical Specifications](#) for weight information.
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.
- When power linking multiple products, mount the products close enough for power linking cables to reach.
- The bracket adjustment knobs allow for directional adjustment when aiming the product to the desired angle. Only loosen or tighten the bracket knobs manually. Using tools could damage the knobs.

Procedure

The Ovation B-2805FC comes with 2 brackets to which you can attach mounting clamps directly. You must supply the mounting clamps. Make sure the clamps are capable of supporting the weight of this product. Use at least one mounting point per product. For the CHAUVET Professional line of mounting clamps, go to <http://www.trusst.com/products>.

Mounting Diagram

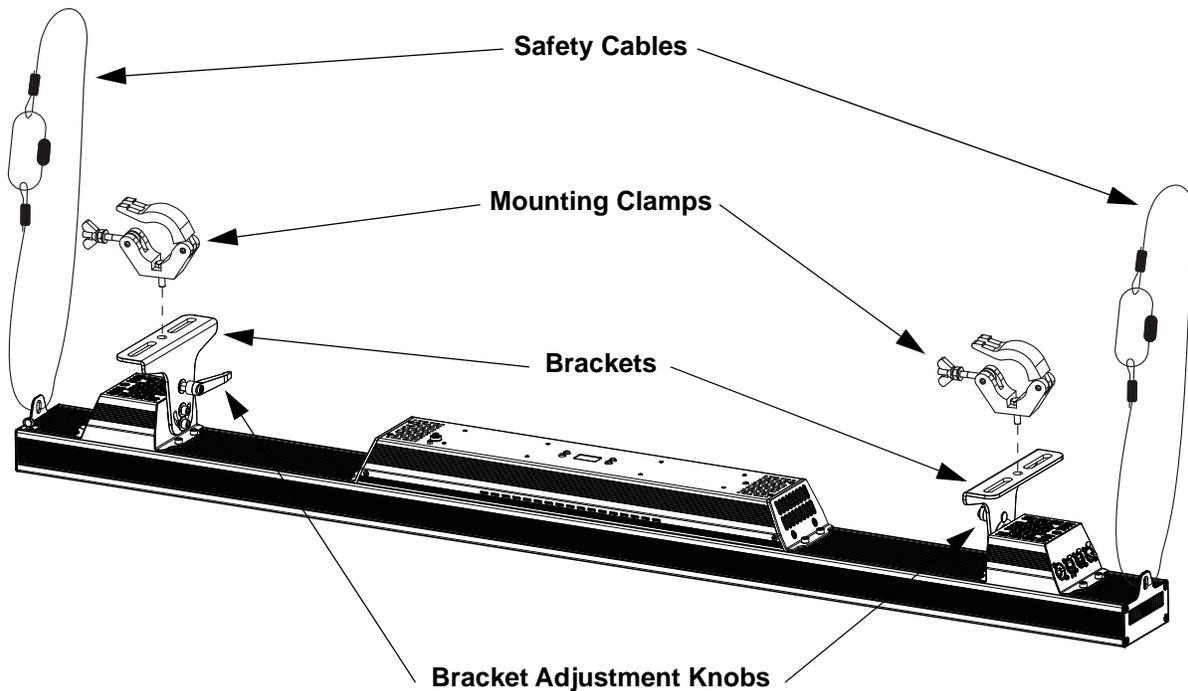

4. OPERATION

Control Panel Operation

BUTTON	FUNCTION
<MENU>	Exits from the current menu or function
<ENTER>	Enables the currently displayed menu or sets the currently selected value in to the current function
<UP>	Navigates upward through the menu list or increases the numeric value when in a function
<DOWN>	Navigates downward through the menu list or decreases the numeric value when in a function

Programming

Refer to the Menu Map to understand the menu options. The menu map shows the main level and a variable number of programming levels for each option.

- To go to the desired main level, press <MENU> repeatedly until the option shows on the display. Press <ENTER> to select. This will take you to the first programming level for that option.
- To select an option or value within the current programming level, press <UP> or <DOWN> until the option shows on the display. Press <ENTER> to select. In this case, if there is another programming level, you will see that first option, or you will see the selected value.
- Press <MENU> repeatedly to exit to the previous main level.

Menu Map

MAIN LEVEL	PROGRAMMING LEVELS		DESCRIPTION
Protocol	DMX512		Selects the control protocol
	ArtNet		
	sACN		
Start Address	001–512*		Selects starting address (*highest channel restricted by selected personality)
Personality	1 Cell	DMX-VCW-CCT 3CH	3-channel: dimmer, virtual color wheel, color temperature
		RGB 3CH	3-channel: RGB
		RGBA 4CH	4-channel: RGBA
		RGBAL 5CH	5-channel: RGBAL
		RGB EXT 8CH	8-channel: 16-bit dimmer, RGB, virtual color wheel, color temperature, strobe
		RGBA EXT 9CH	9-channel: 16-bit dimmer, RGBA, virtual color wheel, color temperature, strobe
		RGBAL EXT 10CH	10-channel: 16-bit dimmer, RGBAL, virtual color wheel, color temperature, strobe
		RGBAL Fine 10CH	10-channel: 16-bit RGBAL
		RGBAL FULL 17CH	17-channel: 16-bit dimmer, 16-bit RGBAL, virtual color wheel, color temperature, strobe, color macros, dimmer mode
	2 Cell	RGB 6CH	6-channel: RGB (per cell)
		RGBA 8CH	8-channel: RGBA (per cell)
		RGBAL 10CH	10-channel: RGBAL (per cell)
		RGB EXT 15CH	15-channel: 16-bit dimmer, RGB (per cell), virtual color wheel (per cell), color temperature (per cell), strobe (per cell)
		RGBA EXT 17CH	17-channel: 16-bit dimmer, RGBA (per cell), virtual color wheel (per cell), color temperature (per cell), strobe (per cell)

MAIN LEVEL	PROGRAMMING LEVELS		DESCRIPTION
Personality (cont.)	2 Cell (cont.)	RGBAL EXT 19CH	19-channel: 16-bit dimmer, RGBAL (per cell), virtual color wheel (per cell), color temperature (per cell), strobe (per cell)
		RGBAL Fine 20CH	20-channel: 16-bit RGBAL (per cell)
		RGBAL FULL 31CH	31-channel: 16-bit dimmer, 16-bit RGBAL (per cell), virtual color wheel (per cell), color temperature (per cell), strobe (per cell), color macros, dimmer mode
	5 Cell	RGB 15CH	15-channel: RGB (per cell)
		RGBA 20CH	20-channel: RGBA (per cell)
		RGBAL 25CH	25-channel: RGBAL (per cell)
		RGB EXT 33CH	33-channel: 16-bit dimmer, RGB (per cell), virtual color wheel (per cell), color temperature (per cell), strobe (per cell)
		RGBA EXT 38CH	38-channel: 16-bit dimmer, RGBA (per cell), virtual color wheel (per cell), color temperature (per cell), strobe (per cell)
		RGBAL EXT 43CH	43-channel: 16-bit dimmer, RGBAL (per cell), virtual color wheel (per cell), color temperature (per cell), strobe (per cell)
		RGBAL Fine 50CH	50-channel: 16-bit RGBAL (per cell)
	RGBAL FULL 70CH	70-channel: 16-bit dimmer, 16-bit RGBAL (per cell), virtual color wheel (per cell), color temperature (per cell), strobe (per cell), color macros, dimmer mode	
	10 Cell	RGB 30CH	30-channel: RGB (per cell)
		RGBA 40CH	40-channel: RGBA (per cell)
		RGBAL 50CH	50-channel: RGBAL (per cell)
		RGB EXT 63CH	63-channel: 16-bit dimmer, RGB (per cell), virtual color wheel (per cell), color temperature (per cell), strobe (per cell)
		RGBA EXT 73CH	73-channel: 16-bit dimmer, RGBA (per cell), virtual color wheel (per cell), color temperature (per cell), strobe (per cell)
		RGBAL EXT 83CH	83-channel: 16-bit dimmer, RGBAL (per cell), virtual color wheel (per cell), color temperature (per cell), strobe (per cell)
		RGBAL Fine 100CH	100-channel: 16-bit RGBAL (per cell)
		RGBAL FULL 135CH	135-channel: 16-bit dimmer, 16-bit RGBAL (per cell), virtual color wheel (per cell), color temperature (per cell), strobe (per cell), color macros, dimmer mode

MAIN LEVEL	PROGRAMMING LEVELS			DESCRIPTION
Virtual Color Wheel	Virtual Color Wheel	R4590-Cal90 Yellow	Dimmer <000–255>	Virtual Color Wheel simulates the output of each gel color from Rosco. Refer to the Virtual Color Wheel Chart section for specific values.
		R11-Light Straw		
		R312-Canary		
		R03-Dark BAmber		
		R18-Flame		
		R20-Medium Amber		
		R21-Golden Amber		
		R26-Light Red		
		R27-Medium Red		
		R33-NoColor Pink		
		R337-True Pink		
		R38-Light Rose		
		R41-Salmon		
		R42-Deep Salmon		
		R44-Middle Rose		
		R349-Fisher Fuchsia		
		R54-Special Lavender		
		R64-Light Steel Blue		
		R364-Blue Bell		
		R65-Daylight Blue		
		R80-Primary Blue		
		R81-Urban Blue		
		R82-Surprise Blue		
		R382-Congo Blue		
		R83-Medium Blue		
		R383-Sapphire Blue		
R90-Dk Yellow Green				
R91-Primary Green				
R92-Turquoise				
R93-Blue Green				
R393-Emerald Green				
	Color Temperature	2800K 3200K 3500K 4000K 4500K 5000K 5600K 6000K 6500K	Dimmer <000–255>	Preset white color temperatures. Emulates a tungsten lamp at the specified color temperature. Refer to the Preset Color Temperature Chart section for specific values.
	Manual Color Mixer	Red Green Blue Amber Lime	<000–255>	Combine red, green, blue, amber, and lime to make a custom color (0–100%)

MAIN LEVEL	PROGRAMMING LEVELS			DESCRIPTION
Auto Show	Auto 1	Speed 1–100		Selects automatic programs and auto program speed
	Auto 2			
	Auto 3			
	Auto 4			
	Auto 5			
	Auto 6			
	Auto 7			
	Auto 8			
	Auto 9			
	Fade			
Master/Slave	Master			Master mode
	Slave			Slave mode
Dimmer Mode	Off			Linear dimmer
	Dimmer 1			Fast dimmer curve
	Dimmer 2			Medium dimmer curve
	Dimmer 3			Slow dimmer curve
White Balance	Off			Uses factory default white setting
	Manual	Red	125–255	Sets red LED maximum value
		Green		Sets green LED maximum value
		Blue		Sets blue LED maximum value
		Amber		Sets amber LED maximum value
		Lime		Sets lime LED maximum value
LED Frequency	600Hz			Selects the PWM output frequency
	1200Hz			
	2000Hz			
	4000Hz			
	25KHz			
Fan Mode	Auto Speed			Sets the fan to auto mode
	On			Sets the fan to always on
	Off			Sets the fan to always off (affects output)
Display	Normal			Normal display orientation
	Inverse			Inverted display
Back Light	On			Display backlight always on
	10S			Turns off display after 10 seconds of inactivity
	20S			Turns off display after 20 seconds of inactivity
	30S			Turns off display after 30 seconds of inactivity
Ethernet Setting	Universe	1 (DMX)		Sets universe for Art-Net™ or sACN
		0–255 (Art-Net™)		
		1-256 (sACN)		
IP Address	---		Sets IP address	
Information	Fixture Hours	----		Shows total hour product has been powered
	Version	V._-V._		Shows installed software version
	Device ID	-----		Shows product device ID
	UID	-----		Shows product UID
Factory Setting	No			Reset to factory defaults
	Yes			

Configuration (DMX/Art-Net™/sACN)

Use control configurations to operate the product with a controller.

Control Protocol

This setting allows you to choose the protocol with which to control the Ovation B-2805FC.

1. Go to the **Protocol** main level.
2. Select the desired control protocol (**DMX512**, **ArtNet**, or **sACN**).

Ethernet Setting

Ethernet protocols (Art-Net™ and sACN) require the Universe and IP address to be set, as well as the [Starting Address](#).

Universe

1. Go to the **Ethernet Setting** main level.
2. Select **Universe**.
3. Set the Universe value (**0–255** for Art-Net™, or **1–256** for sACN).

IP Address

1. Go to the **Ethernet Setting** main level.
1. Select **IP Address**.
2. Set the IP address (**000.000.000.000** to **255.255.255.255**)

Control Personalities

This setting allows you to choose a particular control personality.

1. Go to the **Personality** main level.
2. Select the desired number of cells to be controllable (**1 Cell**, **2 Cell**, **5 Cell**, or **10 Cell**).

Select the desired personality (see table below).

MODE	1-CELL	2-CELL	5-CELL	10-CELL
DMX-VCW-CCT	3CH	N/A	N/A	N/A
RGB	3CH	6CH	15CH	30CH
RGBA	4CH	8CH	20CH	40CH
RGBAL	5CH	10CH	25CH	50CH
RGB EXT	8CH	15CH	33CH	63CH
RGBA EXT	9CH	17CH	38CH	73CH
RGBAL EXT	10CH	19CH	43CH	83CH
RGBAL Fine	10CH	20CH	50CH	100CH
RGBAL FULL	17CH	31CH	70CH	135CH



- See the [Starting Address](#) section for the highest starting address you can select for each personality.
- Make sure that the starting addresses on the various products do not overlap due to the new personality setting.

Starting Address

Each product will respond to a unique starting address from the controller. All products with the same starting address will respond in unison.

1. Go to the **Start Address** main level.
2. Select the starting address (**001–512**).

The highest recommended starting address for each DMX mode is as follows:

PERSONALITY	ADDRESS	PERSONALITY	ADDRESS
1 Cell DMX-VCW-CCT 3CH	510	5 Cell RGB 15CH	498
1 Cell RGB 3CH	510	5 Cell RGBA 20CH	493
1 Cell RGBA 4CH	509	5 Cell RGBAL 25CH	488
1 Cell RGBAL 5CH	508	5 Cell RGB EXT 33CH	480
1 Cell RGB EXT 8CH	505	5 Cell RGBA EXT 38CH	475
1 Cell RGBA EXT 9CH	504	5 Cell RGBAL EXT 43CH	470
1 Cell RGBAL EXT 10CH	503	5 Cell RGBAL Fine 50CH	463
1 Cell RGBAL Fine 10CH	503	5 Cell RGBAL FULL 70CH	443
1 Cell RGBAL FULL 17CH	496	10 Cell RGB 30CH	483
2 Cell RGB 6CH	507	10 Cell RGBA 40CH	473
2 Cell RGBA 8CH	505	10 Cell RGBAL 50CH	463
2 Cell RGBAL 10CH	503	10 Cell RGB EXT 63CH	450
2 Cell RGB EXT 15CH	498	10 Cell RGBA EXT 73CH	440
2 Cell RGBA EXT 17CH	496	10 Cell RGBAL EXT 83CH	430
2 Cell RGBAL EXT 19CH	494	10 Cell RGBAL Fine 100CH	413
2 Cell RGBAL Fine 20CH	493	10 Cell RGBAL FULL 135CH	378
2 Cell RGBAL FULL 31CH	482		

DMX Values

10-Cell Personalities

10-Cell RGBAL FULL 135CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Dimmer	000 ⇄ 255	0–100%
2	Dimmer Fine	000 ⇄ 255	0–100%
3	Red 1	000 ⇄ 255	0–100%
4	Red Fine 1	000 ⇄ 255	0–100%
5	Green 1	000 ⇄ 255	0–100%
6	Green Fine 1	000 ⇄ 255	0–100%
7	Blue 1	000 ⇄ 255	0–100%
8	Blue Fine 1	000 ⇄ 255	0–100%
9	Amber 1	000 ⇄ 255	0–100%
10	Amber Fine 1	000 ⇄ 255	0–100%
11	Lime 1	000 ⇄ 255	0–100%
12	Lime Fine 1	000 ⇄ 255	0–100%
13	Virtual Color Wheel 1	000 ⇄ 255	Refer to the Virtual Color Wheel Chart for specific values
14	Color Temperature 1	000 ⇄ 255	Refer to the Preset Color Temperature Chart for specific values
15	Strobe 1	000 ⇄ 010	No function
		011 ⇄ 255	Strobe, slow to fast

OPERATION

10-Cell RGBAL FULL 135CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
16	Red 2	000 ⇔ 255	0–100%
17	Red Fine 2	000 ⇔ 255	0–100%
18	Green 2	000 ⇔ 255	0–100%
19	Green Fine 2	000 ⇔ 255	0–100%
20	Blue 2	000 ⇔ 255	0–100%
21	Blue Fine 2	000 ⇔ 255	0–100%
22	Amber 2	000 ⇔ 255	0–100%
23	Amber Fine 2	000 ⇔ 255	0–100%
24	Lime 2	000 ⇔ 255	0–100%
25	Lime Fine 2	000 ⇔ 255	0–100%
26	Virtual Color Wheel 2	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
27	Color Temperature 2	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
28	Strobe 2	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
29	Red 3	000 ⇔ 255	0–100%
30	Red Fine 3	000 ⇔ 255	0–100%
31	Green 3	000 ⇔ 255	0–100%
32	Green Fine 3	000 ⇔ 255	0–100%
33	Blue 3	000 ⇔ 255	0–100%
34	Blue Fine 3	000 ⇔ 255	0–100%
35	Amber 3	000 ⇔ 255	0–100%
36	Amber Fine 3	000 ⇔ 255	0–100%
37	Lime 3	000 ⇔ 255	0–100%
38	Lime Fine 3	000 ⇔ 255	0–100%
39	Virtual Color Wheel 3	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
40	Color Temperature 3	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
41	Strobe 3	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
42	Red 4	000 ⇔ 255	0–100%
43	Red Fine 4	000 ⇔ 255	0–100%
44	Green 4	000 ⇔ 255	0–100%
45	Green Fine 4	000 ⇔ 255	0–100%
46	Blue 4	000 ⇔ 255	0–100%
47	Blue Fine 4	000 ⇔ 255	0–100%
48	Amber 4	000 ⇔ 255	0–100%
49	Amber Fine 4	000 ⇔ 255	0–100%
50	Lime 4	000 ⇔ 255	0–100%
51	Lime Fine 4	000 ⇔ 255	0–100%
52	Virtual Color Wheel 4	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
53	Color Temperature 4	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values

10-Cell RGBAL FULL 135CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
54	Strobe 4	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
55	Red 5	000 ⇔ 255	0–100%
56	Red Fine 5	000 ⇔ 255	0–100%
57	Green 5	000 ⇔ 255	0–100%
58	Green Fine 5	000 ⇔ 255	0–100%
59	Blue 5	000 ⇔ 255	0–100%
60	Blue Fine 5	000 ⇔ 255	0–100%
61	Amber 5	000 ⇔ 255	0–100%
62	Amber Fine 5	000 ⇔ 255	0–100%
63	Lime 5	000 ⇔ 255	0–100%
64	Lime Fine 5	000 ⇔ 255	0–100%
65	Virtual Color Wheel 5	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
66	Color Temperature 5	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
67	Strobe 5	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
68	Red 6	000 ⇔ 255	0–100%
69	Red Fine 6	000 ⇔ 255	0–100%
70	Green 6	000 ⇔ 255	0–100%
71	Green Fine 6	000 ⇔ 255	0–100%
72	Blue 6	000 ⇔ 255	0–100%
73	Blue Fine 6	000 ⇔ 255	0–100%
74	Amber 6	000 ⇔ 255	0–100%
75	Amber Fine 6	000 ⇔ 255	0–100%
76	Lime 6	000 ⇔ 255	0–100%
77	Lime Fine 6	000 ⇔ 255	0–100%
78	Virtual Color Wheel 6	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
79	Color Temperature 6	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
80	Strobe 6	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
81	Red 7	000 ⇔ 255	0–100%
82	Red Fine 7	000 ⇔ 255	0–100%
83	Green 7	000 ⇔ 255	0–100%
84	Green Fine 7	000 ⇔ 255	0–100%
85	Blue 7	000 ⇔ 255	0–100%
86	Blue Fine 7	000 ⇔ 255	0–100%
87	Amber 7	000 ⇔ 255	0–100%
88	Amber Fine 7	000 ⇔ 255	0–100%
89	Lime 7	000 ⇔ 255	0–100%
90	Lime Fine 7	000 ⇔ 255	0–100%
91	Virtual Color Wheel 7	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values

OPERATION

10-Cell RGBAL FULL 135CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
92	Color Temperature 7	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
93	Strobe 7	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
94	Red 8	000 ⇔ 255	0–100%
95	Red Fine 8	000 ⇔ 255	0–100%
96	Green 8	000 ⇔ 255	0–100%
97	Green Fine 8	000 ⇔ 255	0–100%
98	Blue 8	000 ⇔ 255	0–100%
99	Blue Fine 8	000 ⇔ 255	0–100%
100	Amber 8	000 ⇔ 255	0–100%
101	Amber Fine 8	000 ⇔ 255	0–100%
102	Lime 8	000 ⇔ 255	0–100%
103	Lime Fine 8	000 ⇔ 255	0–100%
104	Virtual Color Wheel 8	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
105	Color Temperature 8	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
106	Strobe 8	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
107	Red 9	000 ⇔ 255	0–100%
108	Red Fine 9	000 ⇔ 255	0–100%
109	Green 9	000 ⇔ 255	0–100%
110	Green Fine 9	000 ⇔ 255	0–100%
111	Blue 9	000 ⇔ 255	0–100%
112	Blue Fine 9	000 ⇔ 255	0–100%
113	Amber 9	000 ⇔ 255	0–100%
114	Amber Fine 9	000 ⇔ 255	0–100%
115	Lime 9	000 ⇔ 255	0–100%
116	Lime Fine 9	000 ⇔ 255	0–100%
117	Virtual Color Wheel 9	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
118	Color Temperature 9	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
119	Strobe 9	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
120	Red 10	000 ⇔ 255	0–100%
121	Red Fine 10	000 ⇔ 255	0–100%
122	Green 10	000 ⇔ 255	0–100%
123	Green Fine 10	000 ⇔ 255	0–100%
124	Blue 10	000 ⇔ 255	0–100%
125	Blue Fine 10	000 ⇔ 255	0–100%
126	Amber 10	000 ⇔ 255	0–100%
127	Amber Fine 10	000 ⇔ 255	0–100%
128	Lime 10	000 ⇔ 255	0–100%
129	Lime Fine 10	000 ⇔ 255	0–100%

10-Cell RGBAL FULL 135CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
130	Virtual Color Wheel 10	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
131	Color Temperature 10	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
132	Strobe 10	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
133	Strobe All	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
134	Color Macros	000 ⇔ 015	No function
		016 ⇔ 255	Color macros
135	Dimmer Speed	000 ⇔ 051	Preset dimmer speed from display menu
		052 ⇔ 101	Dimmer speed mode off
		102 ⇔ 152	Dimmer speed mode 1 (fastest)
		153 ⇔ 203	Dimmer speed mode 2
		204 ⇔ 255	Dimmer speed mode 3 (slowest)

10-Cell RGBAL Fine 100CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Red 1	000 ⇔ 255	0–100%
2	Red Fine 1	000 ⇔ 255	0–100%
3	Green 1	000 ⇔ 255	0–100%
4	Green Fine 1	000 ⇔ 255	0–100%
5	Blue 1	000 ⇔ 255	0–100%
6	Blue Fine 1	000 ⇔ 255	0–100%
7	Amber 1	000 ⇔ 255	0–100%
8	Amber Fine 1	000 ⇔ 255	0–100%
9	Lime 1	000 ⇔ 255	0–100%
10	Lime Fine 1	000 ⇔ 255	0–100%
11	Red 2	000 ⇔ 255	0–100%
12	Red Fine 2	000 ⇔ 255	0–100%
13	Green 2	000 ⇔ 255	0–100%
14	Green Fine 2	000 ⇔ 255	0–100%
15	Blue 2	000 ⇔ 255	0–100%
16	Blue Fine 2	000 ⇔ 255	0–100%
17	Amber 2	000 ⇔ 255	0–100%
18	Amber Fine 2	000 ⇔ 255	0–100%
19	Lime 2	000 ⇔ 255	0–100%
20	Lime Fine 2	000 ⇔ 255	0–100%
21	Red 3	000 ⇔ 255	0–100%
22	Red Fine 3	000 ⇔ 255	0–100%
23	Green 3	000 ⇔ 255	0–100%
24	Green Fine 3	000 ⇔ 255	0–100%
25	Blue 3	000 ⇔ 255	0–100%
26	Blue Fine 3	000 ⇔ 255	0–100%
27	Amber 3	000 ⇔ 255	0–100%
28	Amber Fine 3	000 ⇔ 255	0–100%

OPERATION

10-Cell RGBAL Fine 100CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
29	Lime 3	000 ⇄ 255	0–100%
30	Lime Fine 3	000 ⇄ 255	0–100%
31	Red 4	000 ⇄ 255	0–100%
32	Red Fine 4	000 ⇄ 255	0–100%
33	Green 4	000 ⇄ 255	0–100%
34	Green Fine 4	000 ⇄ 255	0–100%
35	Blue 4	000 ⇄ 255	0–100%
36	Blue Fine 4	000 ⇄ 255	0–100%
37	Amber 4	000 ⇄ 255	0–100%
38	Amber Fine 4	000 ⇄ 255	0–100%
39	Lime 4	000 ⇄ 255	0–100%
40	Lime Fine 4	000 ⇄ 255	0–100%
41	Red 5	000 ⇄ 255	0–100%
42	Red Fine 5	000 ⇄ 255	0–100%
43	Green 5	000 ⇄ 255	0–100%
44	Green Fine 5	000 ⇄ 255	0–100%
45	Blue 5	000 ⇄ 255	0–100%
46	Blue Fine 5	000 ⇄ 255	0–100%
47	Amber 5	000 ⇄ 255	0–100%
48	Amber Fine 5	000 ⇄ 255	0–100%
49	Lime 5	000 ⇄ 255	0–100%
50	Lime Fine 5	000 ⇄ 255	0–100%
51	Red 6	000 ⇄ 255	0–100%
52	Red Fine 6	000 ⇄ 255	0–100%
53	Green 6	000 ⇄ 255	0–100%
54	Green Fine 6	000 ⇄ 255	0–100%
55	Blue 6	000 ⇄ 255	0–100%
56	Blue Fine 6	000 ⇄ 255	0–100%
57	Amber 6	000 ⇄ 255	0–100%
58	Amber Fine 6	000 ⇄ 255	0–100%
59	Lime 6	000 ⇄ 255	0–100%
60	Lime Fine 6	000 ⇄ 255	0–100%
61	Red 7	000 ⇄ 255	0–100%
62	Red Fine 7	000 ⇄ 255	0–100%
63	Green 7	000 ⇄ 255	0–100%
64	Green Fine 7	000 ⇄ 255	0–100%
65	Blue 7	000 ⇄ 255	0–100%
66	Blue Fine 7	000 ⇄ 255	0–100%
67	Amber 7	000 ⇄ 255	0–100%
68	Amber Fine 7	000 ⇄ 255	0–100%
69	Lime 7	000 ⇄ 255	0–100%
70	Lime Fine 7	000 ⇄ 255	0–100%
71	Red 8	000 ⇄ 255	0–100%
72	Red Fine 8	000 ⇄ 255	0–100%
73	Green 8	000 ⇄ 255	0–100%

10-Cell RGBAL Fine 100CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
74	Green Fine 8	000 ⇄ 255	0–100%
75	Blue 8	000 ⇄ 255	0–100%
76	Blue Fine 8	000 ⇄ 255	0–100%
77	Amber 8	000 ⇄ 255	0–100%
78	Amber Fine 8	000 ⇄ 255	0–100%
79	Lime 8	000 ⇄ 255	0–100%
80	Lime Fine 8	000 ⇄ 255	0–100%
81	Red 9	000 ⇄ 255	0–100%
82	Red Fine 9	000 ⇄ 255	0–100%
83	Green 9	000 ⇄ 255	0–100%
84	Green Fine 9	000 ⇄ 255	0–100%
85	Blue 9	000 ⇄ 255	0–100%
86	Blue Fine 9	000 ⇄ 255	0–100%
87	Amber 9	000 ⇄ 255	0–100%
88	Amber Fine 9	000 ⇄ 255	0–100%
89	Lime 9	000 ⇄ 255	0–100%
90	Lime Fine 9	000 ⇄ 255	0–100%
91	Red 10	000 ⇄ 255	0–100%
92	Red Fine 10	000 ⇄ 255	0–100%
93	Green 10	000 ⇄ 255	0–100%
94	Green Fine 10	000 ⇄ 255	0–100%
95	Blue 10	000 ⇄ 255	0–100%
96	Blue Fine 10	000 ⇄ 255	0–100%
97	Amber 10	000 ⇄ 255	0–100%
98	Amber Fine 10	000 ⇄ 255	0–100%
99	Lime 10	000 ⇄ 255	0–100%
100	Lime Fine 10	000 ⇄ 255	0–100%

10-Cell RGBAL EXT 83CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Dimmer	000 ⇄ 255	0–100%
2	Dimmer Fine	000 ⇄ 255	0–100%
3	Red 1	000 ⇄ 255	0–100%
4	Green 1	000 ⇄ 255	0–100%
5	Blue 1	000 ⇄ 255	0–100%
6	Amber 1	000 ⇄ 255	0–100%
7	Lime 1	000 ⇄ 255	0–100%
8	Virtual Color Wheel 1	000 ⇄ 255	Refer to the Virtual Color Wheel Chart for specific values
9	Color Temperature 1	000 ⇄ 255	Refer to the Preset Color Temperature Chart for specific values
10	Strobe 1	000 ⇄ 010	No function
		011 ⇄ 255	Strobe, slow to fast

OPERATION

10-Cell RGBAL EXT 83CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
11	Red 2	000 ⇔ 255	0–100%
12	Green 2	000 ⇔ 255	0–100%
13	Blue 2	000 ⇔ 255	0–100%
14	Amber 2	000 ⇔ 255	0–100%
15	Lime 2	000 ⇔ 255	0–100%
16	Virtual Color Wheel 2	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
17	Color Temperature 2	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
18	Strobe 2	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
19	Red 3	000 ⇔ 255	0–100%
20	Green 3	000 ⇔ 255	0–100%
21	Blue 3	000 ⇔ 255	0–100%
22	Amber 3	000 ⇔ 255	0–100%
23	Lime 3	000 ⇔ 255	0–100%
24	Virtual Color Wheel 3	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
25	Color Temperature 3	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
26	Strobe 3	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
27	Red 4	000 ⇔ 255	0–100%
28	Green 4	000 ⇔ 255	0–100%
29	Blue 4	000 ⇔ 255	0–100%
30	Amber 4	000 ⇔ 255	0–100%
31	Lime 4	000 ⇔ 255	0–100%
32	Virtual Color Wheel 4	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
33	Color Temperature 4	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
34	Strobe 4	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
35	Red 5	000 ⇔ 255	0–100%
36	Green 5	000 ⇔ 255	0–100%
37	Blue 5	000 ⇔ 255	0–100%
38	Amber 5	000 ⇔ 255	0–100%
39	Lime 5	000 ⇔ 255	0–100%
40	Virtual Color Wheel 5	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
41	Color Temperature 5	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
42	Strobe 5	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
43	Red 6	000 ⇔ 255	0–100%
44	Green 6	000 ⇔ 255	0–100%
45	Blue 6	000 ⇔ 255	0–100%

10-Cell RGBAL EXT 83CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
46	Amber 6	000 ⇔ 255	0–100%
47	Lime 6	000 ⇔ 255	0–100%
48	Virtual Color Wheel 6	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
49	Color Temperature 6	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
50	Strobe 6	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
51	Red 7	000 ⇔ 255	0–100%
52	Green 7	000 ⇔ 255	0–100%
53	Blue 7	000 ⇔ 255	0–100%
54	Amber 7	000 ⇔ 255	0–100%
55	Lime 7	000 ⇔ 255	0–100%
56	Virtual Color Wheel 7	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
57	Color Temperature 7	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
58	Strobe 7	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
59	Red 8	000 ⇔ 255	0–100%
60	Green 8	000 ⇔ 255	0–100%
61	Blue 8	000 ⇔ 255	0–100%
62	Amber 8	000 ⇔ 255	0–100%
63	Lime 8	000 ⇔ 255	0–100%
64	Virtual Color Wheel 8	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
65	Color Temperature 8	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
66	Strobe 8	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
67	Red 9	000 ⇔ 255	0–100%
68	Green 9	000 ⇔ 255	0–100%
69	Blue 9	000 ⇔ 255	0–100%
70	Amber 9	000 ⇔ 255	0–100%
71	Lime 9	000 ⇔ 255	0–100%
72	Virtual Color Wheel 9	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
73	Color Temperature 9	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
74	Strobe 9	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
75	Red 10	000 ⇔ 255	0–100%
76	Green 10	000 ⇔ 255	0–100%
77	Blue 10	000 ⇔ 255	0–100%
78	Amber 10	000 ⇔ 255	0–100%
79	Lime 10	000 ⇔ 255	0–100%

OPERATION

10-Cell RGBAL EXT 83CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
80	Virtual Color Wheel 10	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
81	Color Temperature 10	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
82	Strobe 10	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
83	Strobe All	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast

10-Cell RGBA EXT 73CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red 1	000 ⇔ 255	0–100%
4	Green 1	000 ⇔ 255	0–100%
5	Blue 1	000 ⇔ 255	0–100%
6	Amber 1	000 ⇔ 255	0–100%
7	Virtual Color Wheel 1	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
8	Color Temperature 1	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
9	Strobe 1	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
10	Red 2	000 ⇔ 255	0–100%
11	Green 2	000 ⇔ 255	0–100%
12	Blue 2	000 ⇔ 255	0–100%
13	Amber 2	000 ⇔ 255	0–100%
14	Virtual Color Wheel 2	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
15	Color Temperature 2	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
16	Strobe 2	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
17	Red 3	000 ⇔ 255	0–100%
18	Green 3	000 ⇔ 255	0–100%
19	Blue 3	000 ⇔ 255	0–100%
20	Amber 3	000 ⇔ 255	0–100%
21	Virtual Color Wheel 3	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
22	Color Temperature 3	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
23	Strobe 3	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
24	Red 4	000 ⇔ 255	0–100%
25	Green 4	000 ⇔ 255	0–100%
26	Blue 4	000 ⇔ 255	0–100%
27	Amber 4	000 ⇔ 255	0–100%

10-Cell RGBA EXT 73CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
28	Virtual Color Wheel 4	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
29	Color Temperature 4	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
30	Strobe 4	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
31	Red 5	000 ⇔ 255	0–100%
32	Green 5	000 ⇔ 255	0–100%
33	Blue 5	000 ⇔ 255	0–100%
34	Amber 5	000 ⇔ 255	0–100%
35	Virtual Color Wheel 5	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
36	Color Temperature 5	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
37	Strobe 5	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
38	Red 6	000 ⇔ 255	0–100%
39	Green 6	000 ⇔ 255	0–100%
40	Blue 6	000 ⇔ 255	0–100%
41	Amber 6	000 ⇔ 255	0–100%
42	Virtual Color Wheel 6	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
43	Color Temperature 6	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
44	Strobe 6	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
45	Red 7	000 ⇔ 255	0–100%
46	Green 7	000 ⇔ 255	0–100%
47	Blue 7	000 ⇔ 255	0–100%
48	Amber 7	000 ⇔ 255	0–100%
49	Virtual Color Wheel 7	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
50	Color Temperature 7	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
51	Strobe 7	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
52	Red 8	000 ⇔ 255	0–100%
53	Green 8	000 ⇔ 255	0–100%
54	Blue 8	000 ⇔ 255	0–100%
55	Amber 8	000 ⇔ 255	0–100%
56	Virtual Color Wheel 8	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
57	Color Temperature 8	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
58	Strobe 8	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast

OPERATION

10-Cell RGBA EXT 73CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
59	Red 9	000 ⇔ 255	0–100%
60	Green 9	000 ⇔ 255	0–100%
61	Blue 9	000 ⇔ 255	0–100%
62	Amber 9	000 ⇔ 255	0–100%
63	Virtual Color Wheel 9	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
64	Color Temperature 9	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
65	Strobe 9	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
66	Red 10	000 ⇔ 255	0–100%
67	Green 10	000 ⇔ 255	0–100%
68	Blue 10	000 ⇔ 255	0–100%
69	Amber 10	000 ⇔ 255	0–100%
70	Virtual Color Wheel 10	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
71	Color Temperature 10	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
72	Strobe 10	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
73	Strobe All	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast

10-Cell RGB EXT 63CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red 1	000 ⇔ 255	0–100%
4	Green 1	000 ⇔ 255	0–100%
5	Blue 1	000 ⇔ 255	0–100%
6	Virtual Color Wheel 1	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
7	Color Temperature 1	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
8	Strobe 1	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
9	Red 2	000 ⇔ 255	0–100%
10	Green 2	000 ⇔ 255	0–100%
11	Blue 2	000 ⇔ 255	0–100%
12	Virtual Color Wheel 2	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
13	Color Temperature 2	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
14	Strobe 2	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
15	Red 3	000 ⇔ 255	0–100%
16	Green 3	000 ⇔ 255	0–100%

10-Cell RGB EXT 63CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
17	Blue 3	000 ⇔ 255	0–100%
18	Virtual Color Wheel 3	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
19	Color Temperature 3	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
20	Strobe 3	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
21	Red 4	000 ⇔ 255	0–100%
22	Green 4	000 ⇔ 255	0–100%
23	Blue 4	000 ⇔ 255	0–100%
24	Virtual Color Wheel 4	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
25	Color Temperature 4	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
26	Strobe 4	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
27	Red 5	000 ⇔ 255	0–100%
28	Green 5	000 ⇔ 255	0–100%
29	Blue 5	000 ⇔ 255	0–100%
30	Virtual Color Wheel 5	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
31	Color Temperature 5	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
32	Strobe 5	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
33	Red 6	000 ⇔ 255	0–100%
34	Green 6	000 ⇔ 255	0–100%
35	Blue 6	000 ⇔ 255	0–100%
36	Virtual Color Wheel 6	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
37	Color Temperature 6	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
38	Strobe 6	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
39	Red 7	000 ⇔ 255	0–100%
40	Green 7	000 ⇔ 255	0–100%
41	Blue 7	000 ⇔ 255	0–100%
42	Virtual Color Wheel 7	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
43	Color Temperature 7	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
44	Strobe 7	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
45	Red 8	000 ⇔ 255	0–100%
46	Green 8	000 ⇔ 255	0–100%
47	Blue 8	000 ⇔ 255	0–100%
48	Virtual Color Wheel 8	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values

OPERATION

10-Cell RGB EXT 63CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
49	Color Temperature 8	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
50	Strobe 8	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
51	Red 9	000 ⇔ 255	0–100%
52	Green 9	000 ⇔ 255	0–100%
53	Blue 9	000 ⇔ 255	0–100%
54	Virtual Color Wheel 9	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
55	Color Temperature 9	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
56	Strobe 9	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
57	Red 10	000 ⇔ 255	0–100%
58	Green 10	000 ⇔ 255	0–100%
59	Blue 10	000 ⇔ 255	0–100%
60	Virtual Color Wheel 10	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
61	Color Temperature 10	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
62	Strobe 10	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
63	Strobe All	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast

10-Cell RGBAL 50CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Red 1	000 ⇔ 255	0–100%
2	Green 1	000 ⇔ 255	0–100%
3	Blue 1	000 ⇔ 255	0–100%
4	Amber 1	000 ⇔ 255	0–100%
5	Lime 1	000 ⇔ 255	0–100%
6	Red 2	000 ⇔ 255	0–100%
7	Green 2	000 ⇔ 255	0–100%
8	Blue 2	000 ⇔ 255	0–100%
9	Amber 2	000 ⇔ 255	0–100%
10	Lime 2	000 ⇔ 255	0–100%
11	Red 3	000 ⇔ 255	0–100%
12	Green 3	000 ⇔ 255	0–100%
13	Blue 3	000 ⇔ 255	0–100%
14	Amber 3	000 ⇔ 255	0–100%
15	Lime 3	000 ⇔ 255	0–100%
16	Red 4	000 ⇔ 255	0–100%
17	Green 4	000 ⇔ 255	0–100%
18	Blue 4	000 ⇔ 255	0–100%
19	Amber 4	000 ⇔ 255	0–100%
20	Lime 4	000 ⇔ 255	0–100%

10-Cell RGBAL 50CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
21	Red 5	000 ⇔ 255	0–100%
22	Green 5	000 ⇔ 255	0–100%
23	Blue 5	000 ⇔ 255	0–100%
24	Amber 5	000 ⇔ 255	0–100%
25	Lime 5	000 ⇔ 255	0–100%
26	Red 6	000 ⇔ 255	0–100%
27	Green 6	000 ⇔ 255	0–100%
28	Blue 6	000 ⇔ 255	0–100%
29	Amber 6	000 ⇔ 255	0–100%
30	Lime 6	000 ⇔ 255	0–100%
31	Red 7	000 ⇔ 255	0–100%
32	Green 7	000 ⇔ 255	0–100%
33	Blue 7	000 ⇔ 255	0–100%
34	Amber 7	000 ⇔ 255	0–100%
35	Lime 7	000 ⇔ 255	0–100%
36	Red 8	000 ⇔ 255	0–100%
37	Green 8	000 ⇔ 255	0–100%
38	Blue 8	000 ⇔ 255	0–100%
39	Amber 8	000 ⇔ 255	0–100%
40	Lime 8	000 ⇔ 255	0–100%
41	Red 9	000 ⇔ 255	0–100%
42	Green 9	000 ⇔ 255	0–100%
43	Blue 9	000 ⇔ 255	0–100%
44	Amber 9	000 ⇔ 255	0–100%
45	Lime 9	000 ⇔ 255	0–100%
46	Red 10	000 ⇔ 255	0–100%
47	Green 10	000 ⇔ 255	0–100%
48	Blue 10	000 ⇔ 255	0–100%
49	Amber 10	000 ⇔ 255	0–100%
50	Lime 10	000 ⇔ 255	0–100%

10-Cell RGBA 40CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Red 1	000 ⇔ 255	0–100%
2	Green 1	000 ⇔ 255	0–100%
3	Blue 1	000 ⇔ 255	0–100%
4	Amber 1	000 ⇔ 255	0–100%
5	Red 2	000 ⇔ 255	0–100%
6	Green 2	000 ⇔ 255	0–100%
7	Blue 2	000 ⇔ 255	0–100%
8	Amber 2	000 ⇔ 255	0–100%
9	Red 3	000 ⇔ 255	0–100%
10	Green 3	000 ⇔ 255	0–100%
11	Blue 3	000 ⇔ 255	0–100%
12	Amber 3	000 ⇔ 255	0–100%

OPERATION

10-Cell RGBA 40CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
13	Red 4	000 ⇔ 255	0–100%
14	Green 4	000 ⇔ 255	0–100%
15	Blue 4	000 ⇔ 255	0–100%
16	Amber 4	000 ⇔ 255	0–100%
17	Red 5	000 ⇔ 255	0–100%
18	Green 5	000 ⇔ 255	0–100%
19	Blue 5	000 ⇔ 255	0–100%
20	Amber 5	000 ⇔ 255	0–100%
21	Red 6	000 ⇔ 255	0–100%
22	Green 6	000 ⇔ 255	0–100%
23	Blue 6	000 ⇔ 255	0–100%
24	Amber 6	000 ⇔ 255	0–100%
25	Red 7	000 ⇔ 255	0–100%
26	Green 7	000 ⇔ 255	0–100%
27	Blue 7	000 ⇔ 255	0–100%
28	Amber 7	000 ⇔ 255	0–100%
29	Red 8	000 ⇔ 255	0–100%
30	Green 8	000 ⇔ 255	0–100%
31	Blue 8	000 ⇔ 255	0–100%
32	Amber 8	000 ⇔ 255	0–100%
33	Red 9	000 ⇔ 255	0–100%
34	Green 9	000 ⇔ 255	0–100%
35	Blue 9	000 ⇔ 255	0–100%
36	Amber 9	000 ⇔ 255	0–100%
37	Red 10	000 ⇔ 255	0–100%
38	Green 10	000 ⇔ 255	0–100%
39	Blue 10	000 ⇔ 255	0–100%
40	Amber 10	000 ⇔ 255	0–100%

10-Cell RGB 30CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Red 1	000 ⇔ 255	0–100%
2	Green 1	000 ⇔ 255	0–100%
3	Blue 1	000 ⇔ 255	0–100%
4	Red 2	000 ⇔ 255	0–100%
5	Green 2	000 ⇔ 255	0–100%
6	Blue 2	000 ⇔ 255	0–100%
7	Red 3	000 ⇔ 255	0–100%
8	Green 3	000 ⇔ 255	0–100%
9	Blue 3	000 ⇔ 255	0–100%
10	Red 4	000 ⇔ 255	0–100%
11	Green 4	000 ⇔ 255	0–100%
12	Blue 4	000 ⇔ 255	0–100%
13	Red 5	000 ⇔ 255	0–100%
14	Green 5	000 ⇔ 255	0–100%

10-Cell RGB 30CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
15	Blue 5	000 ⇔ 255	0–100%
16	Red 6	000 ⇔ 255	0–100%
17	Green 6	000 ⇔ 255	0–100%
18	Blue 6	000 ⇔ 255	0–100%
19	Red 7	000 ⇔ 255	0–100%
20	Green 7	000 ⇔ 255	0–100%
21	Blue 7	000 ⇔ 255	0–100%
22	Red 8	000 ⇔ 255	0–100%
23	Green 8	000 ⇔ 255	0–100%
24	Blue 8	000 ⇔ 255	0–100%
25	Red 9	000 ⇔ 255	0–100%
26	Green 9	000 ⇔ 255	0–100%
27	Blue 9	000 ⇔ 255	0–100%
28	Red 10	000 ⇔ 255	0–100%
29	Green 10	000 ⇔ 255	0–100%
30	Blue 10	000 ⇔ 255	0–100%

5-Cell Personalities

5-Cell RGBAL FULL 70CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red 1	000 ⇔ 255	0–100%
4	Red Fine 1	000 ⇔ 255	0–100%
5	Green 1	000 ⇔ 255	0–100%
6	Green Fine 1	000 ⇔ 255	0–100%
7	Blue 1	000 ⇔ 255	0–100%
8	Blue Fine 1	000 ⇔ 255	0–100%
9	Amber 1	000 ⇔ 255	0–100%
10	Amber Fine 1	000 ⇔ 255	0–100%
11	Lime 1	000 ⇔ 255	0–100%
12	Lime Fine 1	000 ⇔ 255	0–100%
13	Virtual Color Wheel 1	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
14	Color Temperature 1	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
15	Strobe 1	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
16	Red 2	000 ⇔ 255	0–100%
17	Red Fine 2	000 ⇔ 255	0–100%
18	Green 2	000 ⇔ 255	0–100%
19	Green Fine 2	000 ⇔ 255	0–100%
20	Blue 2	000 ⇔ 255	0–100%
21	Blue Fine 2	000 ⇔ 255	0–100%
22	Amber 2	000 ⇔ 255	0–100%
23	Amber Fine 2	000 ⇔ 255	0–100%

5-Cell RGBAL FULL 70CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
24	Lime 2	000 ⇔ 255	0–100%
25	Lime Fine 2	000 ⇔ 255	0–100%
26	Virtual Color Wheel 2	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
27	Color Temperature 2	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
28	Strobe 2	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
29	Red 3	000 ⇔ 255	0–100%
30	Red Fine 3	000 ⇔ 255	0–100%
31	Green 3	000 ⇔ 255	0–100%
32	Green Fine 3	000 ⇔ 255	0–100%
33	Blue 3	000 ⇔ 255	0–100%
34	Blue Fine 3	000 ⇔ 255	0–100%
35	Amber 3	000 ⇔ 255	0–100%
36	Amber Fine 3	000 ⇔ 255	0–100%
37	Lime 3	000 ⇔ 255	0–100%
38	Lime Fine 3	000 ⇔ 255	0–100%
39	Virtual Color Wheel 3	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
40	Color Temperature 3	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
41	Strobe 3	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
42	Red 4	000 ⇔ 255	0–100%
43	Red Fine 4	000 ⇔ 255	0–100%
44	Green 4	000 ⇔ 255	0–100%
45	Green Fine 4	000 ⇔ 255	0–100%
46	Blue 4	000 ⇔ 255	0–100%
47	Blue Fine 4	000 ⇔ 255	0–100%
48	Amber 4	000 ⇔ 255	0–100%
49	Amber Fine 4	000 ⇔ 255	0–100%
50	Lime 4	000 ⇔ 255	0–100%
51	Lime Fine 4	000 ⇔ 255	0–100%
52	Virtual Color Wheel 4	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
53	Color Temperature 4	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
54	Strobe 4	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
55	Red 5	000 ⇔ 255	0–100%
56	Red Fine 5	000 ⇔ 255	0–100%
57	Green 5	000 ⇔ 255	0–100%
58	Green Fine 5	000 ⇔ 255	0–100%
59	Blue 5	000 ⇔ 255	0–100%
60	Blue Fine 5	000 ⇔ 255	0–100%

5-Cell RGBAL FULL 70CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
61	Amber 5	000 ⇔ 255	0–100%
62	Amber Fine 5	000 ⇔ 255	0–100%
63	Lime 5	000 ⇔ 255	0–100%
64	Lime Fine 5	000 ⇔ 255	0–100%
65	Virtual Color Wheel 5	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
66	Color Temperature 5	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
67	Strobe 5	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
68	Strobe All	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
69	Color Macros	000 ⇔ 015	No function
		016 ⇔ 255	Color macros
70	Dimmer Speed	000 ⇔ 051	Preset dimmer speed from display menu
		052 ⇔ 101	Dimmer speed mode off
		102 ⇔ 152	Dimmer speed mode 1 (fastest)
		153 ⇔ 203	Dimmer speed mode 2
		204 ⇔ 255	Dimmer speed mode 3 (slowest)

5-Cell RGBAL Fine 50CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Red 1	000 ⇔ 255	0–100%
2	Red Fine 1	000 ⇔ 255	0–100%
3	Green 1	000 ⇔ 255	0–100%
4	Green Fine 1	000 ⇔ 255	0–100%
5	Blue 1	000 ⇔ 255	0–100%
6	Blue Fine 1	000 ⇔ 255	0–100%
7	Amber 1	000 ⇔ 255	0–100%
8	Amber Fine 1	000 ⇔ 255	0–100%
9	Lime 1	000 ⇔ 255	0–100%
10	Lime Fine 1	000 ⇔ 255	0–100%
11	Red 2	000 ⇔ 255	0–100%
12	Red Fine 2	000 ⇔ 255	0–100%
13	Green 2	000 ⇔ 255	0–100%
14	Green Fine 2	000 ⇔ 255	0–100%
15	Blue 2	000 ⇔ 255	0–100%
16	Blue Fine 2	000 ⇔ 255	0–100%
17	Amber 2	000 ⇔ 255	0–100%
18	Amber Fine 2	000 ⇔ 255	0–100%
19	Lime 2	000 ⇔ 255	0–100%
20	Lime Fine 2	000 ⇔ 255	0–100%
21	Red 3	000 ⇔ 255	0–100%
22	Red Fine 3	000 ⇔ 255	0–100%
23	Green 3	000 ⇔ 255	0–100%
24	Green Fine 3	000 ⇔ 255	0–100%

OPERATION

5-Cell RGBAL Fine 50CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
25	Blue 3	000 ⇔ 255	0–100%
26	Blue Fine 3	000 ⇔ 255	0–100%
27	Amber 3	000 ⇔ 255	0–100%
28	Amber Fine 3	000 ⇔ 255	0–100%
29	Lime 3	000 ⇔ 255	0–100%
30	Lime Fine 3	000 ⇔ 255	0–100%
31	Red 4	000 ⇔ 255	0–100%
32	Red Fine 4	000 ⇔ 255	0–100%
33	Green 4	000 ⇔ 255	0–100%
34	Green Fine 4	000 ⇔ 255	0–100%
35	Blue 4	000 ⇔ 255	0–100%
36	Blue Fine 4	000 ⇔ 255	0–100%
37	Amber 4	000 ⇔ 255	0–100%
38	Amber Fine 4	000 ⇔ 255	0–100%
39	Lime 4	000 ⇔ 255	0–100%
40	Lime Fine 4	000 ⇔ 255	0–100%
41	Red 5	000 ⇔ 255	0–100%
42	Red Fine 5	000 ⇔ 255	0–100%
43	Green 5	000 ⇔ 255	0–100%
44	Green Fine 5	000 ⇔ 255	0–100%
45	Blue 5	000 ⇔ 255	0–100%
46	Blue Fine 5	000 ⇔ 255	0–100%
47	Amber 5	000 ⇔ 255	0–100%
48	Amber Fine 5	000 ⇔ 255	0–100%
49	Lime 5	000 ⇔ 255	0–100%
50	Lime Fine 5	000 ⇔ 255	0–100%

5-Cell RGBAL EXT 43CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red 1	000 ⇔ 255	0–100%
4	Green 1	000 ⇔ 255	0–100%
5	Blue 1	000 ⇔ 255	0–100%
6	Amber 1	000 ⇔ 255	0–100%
7	Lime 1	000 ⇔ 255	0–100%
8	Virtual Color Wheel 1	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
9	Color Temperature 1	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
10	Strobe 1	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
11	Red 2	000 ⇔ 255	0–100%
12	Green 2	000 ⇔ 255	0–100%
13	Blue 2	000 ⇔ 255	0–100%

5-Cell RGBAL EXT 43CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
14	Amber 2	000 ⇔ 255	0–100%
15	Lime 2	000 ⇔ 255	0–100%
16	Virtual Color Wheel 2	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
17	Color Temperature 2	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
18	Strobe 2	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
19	Red 3	000 ⇔ 255	0–100%
20	Green 3	000 ⇔ 255	0–100%
21	Blue 3	000 ⇔ 255	0–100%
22	Amber 3	000 ⇔ 255	0–100%
23	Lime 3	000 ⇔ 255	0–100%
24	Virtual Color Wheel 3	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
25	Color Temperature 3	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
26	Strobe 3	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
27	Red 4	000 ⇔ 255	0–100%
28	Green 4	000 ⇔ 255	0–100%
29	Blue 4	000 ⇔ 255	0–100%
30	Amber 4	000 ⇔ 255	0–100%
31	Lime 4	000 ⇔ 255	0–100%
32	Virtual Color Wheel 4	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
33	Color Temperature 4	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
34	Strobe 4	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
35	Red 5	000 ⇔ 255	0–100%
36	Green 5	000 ⇔ 255	0–100%
37	Blue 5	000 ⇔ 255	0–100%
38	Amber 5	000 ⇔ 255	0–100%
39	Lime 5	000 ⇔ 255	0–100%
40	Virtual Color Wheel 5	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
41	Color Temperature 5	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
42	Strobe 5	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
43	Strobe All	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast

5-Cell RGBA EXT 38CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red 1	000 ⇔ 255	0–100%
4	Green 1	000 ⇔ 255	0–100%
5	Blue 1	000 ⇔ 255	0–100%
6	Amber 1	000 ⇔ 255	0–100%
7	Virtual Color Wheel 1	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
8	Color Temperature 1	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
9	Strobe 1	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
10	Red 2	000 ⇔ 255	0–100%
11	Green 2	000 ⇔ 255	0–100%
12	Blue 2	000 ⇔ 255	0–100%
13	Amber 2	000 ⇔ 255	0–100%
14	Virtual Color Wheel 2	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
15	Color Temperature 2	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
16	Strobe 2	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
17	Red 3	000 ⇔ 255	0–100%
18	Green 3	000 ⇔ 255	0–100%
19	Blue 3	000 ⇔ 255	0–100%
20	Amber 3	000 ⇔ 255	0–100%
21	Virtual Color Wheel 3	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
22	Color Temperature 3	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
23	Strobe 3	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
24	Red 4	000 ⇔ 255	0–100%
25	Green 4	000 ⇔ 255	0–100%
26	Blue 4	000 ⇔ 255	0–100%
27	Amber 4	000 ⇔ 255	0–100%
28	Virtual Color Wheel 4	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
29	Color Temperature 4	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
30	Strobe 4	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
31	Red 5	000 ⇔ 255	0–100%
32	Green 5	000 ⇔ 255	0–100%
33	Blue 5	000 ⇔ 255	0–100%
34	Amber 5	000 ⇔ 255	0–100%

5-Cell RGBA EXT 38CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
35	Virtual Color Wheel 5	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
36	Color Temperature 5	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
37	Strobe 5	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
38	Strobe All	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast

5-Cell RGB EXT 33CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red 1	000 ⇔ 255	0–100%
4	Green 1	000 ⇔ 255	0–100%
5	Blue 1	000 ⇔ 255	0–100%
6	Virtual Color Wheel 1	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
7	Color Temperature 1	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
8	Strobe 1	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
9	Red 2	000 ⇔ 255	0–100%
10	Green 2	000 ⇔ 255	0–100%
11	Blue 2	000 ⇔ 255	0–100%
12	Virtual Color Wheel 2	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
13	Color Temperature 2	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
14	Strobe 2	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
15	Red 3	000 ⇔ 255	0–100%
16	Green 3	000 ⇔ 255	0–100%
17	Blue 3	000 ⇔ 255	0–100%
18	Virtual Color Wheel 3	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
19	Color Temperature 3	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
20	Strobe 3	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
21	Red 4	000 ⇔ 255	0–100%
22	Green 4	000 ⇔ 255	0–100%
23	Blue 4	000 ⇔ 255	0–100%
24	Virtual Color Wheel 4	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
25	Color Temperature 4	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values

OPERATION

5-Cell RGB EXT 33CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
26	Strobe 4	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
27	Red 5	000 ⇔ 255	0–100%
28	Green 5	000 ⇔ 255	0–100%
29	Blue 5	000 ⇔ 255	0–100%
30	Virtual Color Wheel 5	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
31	Color Temperature 5	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
32	Strobe 5	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
33	Strobe All	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast

5-Cell RGBAL 25CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Red 1	000 ⇔ 255	0–100%
2	Green 1	000 ⇔ 255	0–100%
3	Blue 1	000 ⇔ 255	0–100%
4	Amber 1	000 ⇔ 255	0–100%
5	Lime 1	000 ⇔ 255	0–100%
6	Red 2	000 ⇔ 255	0–100%
7	Green 2	000 ⇔ 255	0–100%
8	Blue 2	000 ⇔ 255	0–100%
9	Amber 2	000 ⇔ 255	0–100%
10	Lime 2	000 ⇔ 255	0–100%
11	Red 3	000 ⇔ 255	0–100%
12	Green 3	000 ⇔ 255	0–100%
13	Blue 3	000 ⇔ 255	0–100%
14	Amber 3	000 ⇔ 255	0–100%
15	Lime 3	000 ⇔ 255	0–100%
16	Red 4	000 ⇔ 255	0–100%
17	Green 4	000 ⇔ 255	0–100%
18	Blue 4	000 ⇔ 255	0–100%
19	Amber 4	000 ⇔ 255	0–100%
20	Lime 4	000 ⇔ 255	0–100%
21	Red 5	000 ⇔ 255	0–100%
22	Green 5	000 ⇔ 255	0–100%
23	Blue 5	000 ⇔ 255	0–100%
24	Amber 5	000 ⇔ 255	0–100%
25	Lime 5	000 ⇔ 255	0–100%

5-Cell RGBA 20CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Red 1	000 ⇄ 255	0–100%
2	Green 1	000 ⇄ 255	0–100%
3	Blue 1	000 ⇄ 255	0–100%
4	Amber 1	000 ⇄ 255	0–100%
5	Red 2	000 ⇄ 255	0–100%
6	Green 2	000 ⇄ 255	0–100%
7	Blue 2	000 ⇄ 255	0–100%
8	Amber 2	000 ⇄ 255	0–100%
9	Red 3	000 ⇄ 255	0–100%
10	Green 3	000 ⇄ 255	0–100%
11	Blue 3	000 ⇄ 255	0–100%
12	Amber 3	000 ⇄ 255	0–100%
13	Red 4	000 ⇄ 255	0–100%
14	Green 4	000 ⇄ 255	0–100%
15	Blue 4	000 ⇄ 255	0–100%
16	Amber 4	000 ⇄ 255	0–100%
17	Red 5	000 ⇄ 255	0–100%
18	Green 5	000 ⇄ 255	0–100%
19	Blue 5	000 ⇄ 255	0–100%
20	Amber 5	000 ⇄ 255	0–100%

5-Cell RGB 15CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Red 1	000 ⇄ 255	0–100%
2	Green 1	000 ⇄ 255	0–100%
3	Blue 1	000 ⇄ 255	0–100%
4	Red 2	000 ⇄ 255	0–100%
5	Green 2	000 ⇄ 255	0–100%
6	Blue 2	000 ⇄ 255	0–100%
7	Red 3	000 ⇄ 255	0–100%
8	Green 3	000 ⇄ 255	0–100%
9	Blue 3	000 ⇄ 255	0–100%
10	Red 4	000 ⇄ 255	0–100%
11	Green 4	000 ⇄ 255	0–100%
12	Blue 4	000 ⇄ 255	0–100%
13	Red 5	000 ⇄ 255	0–100%
14	Green 5	000 ⇄ 255	0–100%
15	Blue 5	000 ⇄ 255	0–100%

OPERATION

2-Cell Personalities 2-Cell RGBAL FULL 31CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red 1	000 ⇔ 255	0–100%
4	Red Fine 1	000 ⇔ 255	0–100%
5	Green 1	000 ⇔ 255	0–100%
6	Green Fine 1	000 ⇔ 255	0–100%
7	Blue 1	000 ⇔ 255	0–100%
8	Blue Fine 1	000 ⇔ 255	0–100%
9	Amber 1	000 ⇔ 255	0–100%
10	Amber Fine 1	000 ⇔ 255	0–100%
11	Lime 1	000 ⇔ 255	0–100%
12	Lime Fine 1	000 ⇔ 255	0–100%
13	Virtual Color Wheel 1	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
14	Color Temperature 1	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
15	Strobe 1	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
16	Red 2	000 ⇔ 255	0–100%
17	Red Fine 2	000 ⇔ 255	0–100%
18	Green 2	000 ⇔ 255	0–100%
19	Green Fine 2	000 ⇔ 255	0–100%
20	Blue 2	000 ⇔ 255	0–100%
21	Blue Fine 2	000 ⇔ 255	0–100%
22	Amber 2	000 ⇔ 255	0–100%
23	Amber Fine 2	000 ⇔ 255	0–100%
24	Lime 1	000 ⇔ 255	0–100%
25	Lime Fine 1	000 ⇔ 255	0–100%
26	Virtual Color Wheel 1	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
27	Color Temperature 1	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
28	Strobe 1	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
29	Strobe All	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
30	Color Macros	000 ⇔ 015	No function
		016 ⇔ 255	Color macros
31	Dimmer Speed	000 ⇔ 051	Preset dimmer speed from display menu
		052 ⇔ 101	Dimmer speed mode off
		102 ⇔ 152	Dimmer speed mode 1 (fastest)
		153 ⇔ 203	Dimmer speed mode 2
		204 ⇔ 255	Dimmer speed mode 3 (slowest)

2-Cell RGBAL Fine 20CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Red 1	000 ⇄ 255	0–100%
2	Red Fine 1	000 ⇄ 255	0–100%
3	Green 1	000 ⇄ 255	0–100%
4	Green Fine 1	000 ⇄ 255	0–100%
5	Blue 1	000 ⇄ 255	0–100%
6	Blue Fine 1	000 ⇄ 255	0–100%
7	Amber 1	000 ⇄ 255	0–100%
8	Amber Fine 1	000 ⇄ 255	0–100%
9	Lime 1	000 ⇄ 255	0–100%
10	Lime Fine 1	000 ⇄ 255	0–100%
11	Red 2	000 ⇄ 255	0–100%
12	Red Fine 2	000 ⇄ 255	0–100%
13	Green 2	000 ⇄ 255	0–100%
14	Green Fine 2	000 ⇄ 255	0–100%
15	Blue 2	000 ⇄ 255	0–100%
16	Blue Fine 2	000 ⇄ 255	0–100%
17	Amber 2	000 ⇄ 255	0–100%
18	Amber Fine 2	000 ⇄ 255	0–100%
19	Lime 2	000 ⇄ 255	0–100%
20	Lime Fine 2	000 ⇄ 255	0–100%

2-Cell RGBAL EXT 19CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Dimmer	000 ⇄ 255	0–100%
2	Dimmer Fine	000 ⇄ 255	0–100%
3	Red 1	000 ⇄ 255	0–100%
4	Green 1	000 ⇄ 255	0–100%
5	Blue 1	000 ⇄ 255	0–100%
6	Amber 1	000 ⇄ 255	0–100%
7	Lime 1	000 ⇄ 255	0–100%
8	Virtual Color Wheel 1	000 ⇄ 255	Refer to the Virtual Color Wheel Chart for specific values
9	Color Temperature 1	000 ⇄ 255	Refer to the Preset Color Temperature Chart for specific values
10	Strobe 1	000 ⇄ 010	No function
		011 ⇄ 255	Strobe, slow to fast
11	Red 2	000 ⇄ 255	0–100%
12	Green 2	000 ⇄ 255	0–100%
13	Blue 2	000 ⇄ 255	0–100%
14	Amber 2	000 ⇄ 255	0–100%
15	Lime 2	000 ⇄ 255	0–100%
16	Virtual Color Wheel 2	000 ⇄ 255	Refer to the Virtual Color Wheel Chart for specific values
17	Color Temperature 2	000 ⇄ 255	Refer to the Preset Color Temperature Chart for specific values

OPERATION

2-Cell RGBAL EXT 19CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
18	Strobe 2	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
19	Strobe All	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast

2-Cell RGBA EXT 17CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red 1	000 ⇔ 255	0–100%
4	Green 1	000 ⇔ 255	0–100%
5	Blue 1	000 ⇔ 255	0–100%
6	Amber 1	000 ⇔ 255	0–100%
7	Virtual Color Wheel 1	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
8	Color Temperature 1	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
9	Strobe 1	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
10	Red 2	000 ⇔ 255	0–100%
11	Green 2	000 ⇔ 255	0–100%
12	Blue 2	000 ⇔ 255	0–100%
13	Amber 2	000 ⇔ 255	0–100%
14	Virtual Color Wheel 2	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
15	Color Temperature 2	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
16	Strobe 2	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
17	Strobe All	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast

2-Cell RGB EXT 15CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red 1	000 ⇔ 255	0–100%
4	Green 1	000 ⇔ 255	0–100%
5	Blue 1	000 ⇔ 255	0–100%
6	Virtual Color Wheel 1	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
7	Color Temperature 1	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
8	Strobe 1	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
9	Red 2	000 ⇔ 255	0–100%
10	Green 2	000 ⇔ 255	0–100%

2-Cell RGB EXT 15CH (cont.)

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
11	Blue 2	000 ⇔ 255	0–100%
12	Virtual Color Wheel 2	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
13	Color Temperature 2	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
14	Strobe 2	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
15	Strobe All	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast

2-Cell RGBAL 10CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Red 1	000 ⇔ 255	0–100%
2	Green 1	000 ⇔ 255	0–100%
3	Blue 1	000 ⇔ 255	0–100%
4	Amber 1	000 ⇔ 255	0–100%
5	Lime 1	000 ⇔ 255	0–100%
6	Red 2	000 ⇔ 255	0–100%
7	Green 2	000 ⇔ 255	0–100%
8	Blue 2	000 ⇔ 255	0–100%
9	Amber 2	000 ⇔ 255	0–100%
10	Lime 2	000 ⇔ 255	0–100%

2-Cell RGBA 8CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Red 1	000 ⇔ 255	0–100%
2	Green 1	000 ⇔ 255	0–100%
3	Blue 1	000 ⇔ 255	0–100%
4	Amber 1	000 ⇔ 255	0–100%
5	Red 2	000 ⇔ 255	0–100%
6	Green 2	000 ⇔ 255	0–100%
7	Blue 2	000 ⇔ 255	0–100%
8	Amber 2	000 ⇔ 255	0–100%

2-Cell RGB 6CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Red 1	000 ⇔ 255	0–100%
2	Green 1	000 ⇔ 255	0–100%
3	Blue 1	000 ⇔ 255	0–100%
4	Red 2	000 ⇔ 255	0–100%
5	Green 2	000 ⇔ 255	0–100%
6	Blue 2	000 ⇔ 255	0–100%

OPERATION

1-Cell Personalities

1-Cell RGBAL FULL 17CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Red Fine	000 ⇔ 255	0–100%
5	Green	000 ⇔ 255	0–100%
6	Green Fine	000 ⇔ 255	0–100%
7	Blue	000 ⇔ 255	0–100%
8	Blue Fine	000 ⇔ 255	0–100%
9	Amber	000 ⇔ 255	0–100%
10	Amber Fine	000 ⇔ 255	0–100%
11	Lime	000 ⇔ 255	0–100%
12	Lime Fine	000 ⇔ 255	0–100%
13	Virtual Color Wheel	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
14	Color Temperature	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
15	Strobe	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
16	Color Macros	000 ⇔ 015	No function
		016 ⇔ 255	Color macros
17	Dimmer Speed	000 ⇔ 051	Preset dimmer speed from display menu
		052 ⇔ 101	Dimmer speed mode off
		102 ⇔ 152	Dimmer speed mode 1 (fastest)
		153 ⇔ 203	Dimmer speed mode 2
		204 ⇔ 255	Dimmer speed mode 3 (slowest)

1-Cell RGBAL Fine 10CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Red	000 ⇔ 255	0–100%
2	Red Fine	000 ⇔ 255	0–100%
3	Green	000 ⇔ 255	0–100%
4	Green Fine	000 ⇔ 255	0–100%
5	Blue	000 ⇔ 255	0–100%
6	Blue Fine	000 ⇔ 255	0–100%
7	Amber	000 ⇔ 255	0–100%
8	Amber Fine	000 ⇔ 255	0–100%
9	Lime	000 ⇔ 255	0–100%
10	Lime Fine	000 ⇔ 255	0–100%

1-Cell RGBAL EXT 10CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Green	000 ⇔ 255	0–100%
5	Blue	000 ⇔ 255	0–100%
6	Amber	000 ⇔ 255	0–100%
7	Lime	000 ⇔ 255	0–100%
8	Virtual Color Wheel	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
9	Color Temperature	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
10	Strobe	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast

1-Cell RGBA EXT 9CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Green	000 ⇔ 255	0–100%
5	Blue	000 ⇔ 255	0–100%
6	Amber	000 ⇔ 255	0–100%
7	Virtual Color Wheel	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
8	Color Temperature	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
9	Strobe	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast

1-Cell RGB EXT 8CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Green	000 ⇔ 255	0–100%
5	Blue	000 ⇔ 255	0–100%
6	Virtual Color Wheel	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
7	Color Temperature	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values
8	Strobe	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast

OPERATION

1-Cell RGBAL 5CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Red	000 ⇔ 255	0–100%
2	Green	000 ⇔ 255	0–100%
3	Blue	000 ⇔ 255	0–100%
4	Amber	000 ⇔ 255	0–100%
5	Lime	000 ⇔ 255	0–100%

1-Cell RGBA 4CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Red	000 ⇔ 255	0–100%
2	Green	000 ⇔ 255	0–100%
3	Blue	000 ⇔ 255	0–100%
4	Amber	000 ⇔ 255	0–100%

1-Cell RGB 3CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Red	000 ⇔ 255	0–100%
2	Green	000 ⇔ 255	0–100%
3	Blue	000 ⇔ 255	0–100%

1-Cell DMX-VCW-CCT 3CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Dimmer	000 ⇔ 255	0–100%
2	Virtual Color Wheel	000 ⇔ 255	Refer to the Virtual Color Wheel Chart for specific values
3	Color Temperature	000 ⇔ 255	Refer to the Preset Color Temperature Chart for specific values

Virtual Color Wheel

The Ovation B-2805FC includes a feature called the Virtual Color Wheel (VCW). This feature is available as a stand-alone control mode for manual use and also as a control channel in each of the products' DMX personalities. Over thirty pre-mixed colors based on popular gel colors from Rosco are available to call up for easier programming. When manually selecting the colors on the Virtual Color Wheel, the referenced gel number appears on the LED display for convenient selection and ease-of-use.



These formulas were developed to match a gelled tungsten lamp. When developing the above formulas, the master dimmer on the Ovation B-2805FC was adjusted to match the gelled output of the tungsten fixture. Please note that due to the efficacy of the light source, Virtual Color Wheel output may look different from the gelled equivalent on a tungsten source at full intensity. The master dimmer values may need to be adjusted to match the tungsten fixture in the most saturated colors.

Virtual Color Wheel Chart

DMX CHANNEL VALUE	DISPLAY READOUT	RED VALUE	GREEN VALUE	BLUE VALUE	AMBER VALUE	LIME VALUE
000 ⇔ 005		000	000	000	000	000
006 ⇔ 013	R4590-Cal90 Yellow	150	125	002	255	043
014 ⇔ 021	R11-Light Straw	235	108	005	255	076
022 ⇔ 028	R312-Canary	171	036	000	120	255
029 ⇔ 035	R03-Dark BAmber	255	015	017	255	170
036 ⇔ 043	R18-Flame	255	000	010	255	143
044 ⇔ 051	R20-Medium Amber	255	000	003	255	075
052 ⇔ 059	R21-Golden Amber	188	000	002	255	044
060 ⇔ 067	R26-Light Red	255	000	002	021	002
068 ⇔ 075	R27-Medium Red	255	000	002	000	000
076 ⇔ 083	R33-No Color Pink	255	130	025	255	027
084 ⇔ 091	R337-True Pink	255	013	041	235	182
092 ⇔ 099	R38-Light Rose	255	015	027	030	255
100 ⇔ 107	R41-Salmon	255	000	004	115	009
108 ⇔ 115	R42-Deep Salmon	255	000	004	011	008
116 ⇔ 121	R44-Middle Rose	255	000	022	081	039
122 ⇔ 130	R349-Fisher Fuchsia	160	000	025	000	004
131 ⇔ 138	R54-Special Lavender	255	162	043	255	140
139 ⇔ 146	R64-Light Steel Blue	012	255	070	076	115
147 ⇔ 154	R364-Blue Bell	030	187	085	215	255
155 ⇔ 162	R65-Daylight Blue	004	255	062	093	049
163 ⇔ 170	R80-Primary Blue	005	255	190	003	012
171 ⇔ 178	R81-Urban Blue	008	250	145	005	088
179 ⇔ 186	R82-Surprise Blue	005	209	255	015	074
187 ⇔ 194	R382-Congo Blue	005	000	200	013	003
195 ⇔ 202	R83-Medium Blue	007	112	255	005	007
203 ⇔ 210	R383-Sapphire Blue	004	108	255	003	004
211 ⇔ 218	R90-Dk Yellow Green	004	255	000	005	003
219 ⇔ 226	R91-Primary Green	027	255	006	000	020
227 ⇔ 234	R92-Turquoise	007	255	021	070	076
235 ⇔ 242	R93-Blue Green	007	255	031	085	115
243 ⇔ 250	R393-Emerald Green	002	255	017	002	020
251 ⇔ 255		000	000	000	000	000



Note: The colors above are simulated renditions of the color output produced as compared to other similar incandescent products. Chauvet makes no guarantee of the color output accuracy.

Preset Color Temperature Chart

DMX CHANNEL VALUE	DISPLAY READOUT	RED VALUE	GREEN VALUE	BLUE VALUE	AMBER VALUE	LIME VALUE
000 ⇔ 005		000	000	000	000	000
006 ⇔ 025	2800K	255	051	018	255	255
026 ⇔ 050	3200K	179	082	025	185	220
051 ⇔ 075	3500K	255	130	033	255	240
076 ⇔ 100	4000K	255	219	045	198	255
101 ⇔ 125	4500K	140	255	055	255	255
126 ⇔ 150	5000K	107	255	063	200	255
151 ⇔ 175	5600K	082	255	072	190	230
176 ⇔ 200	6000K	074	255	078	167	255
201 ⇔ 225	6500K	065	255	084	140	255
226 ⇔ 255		000	000	000	000	000



Note: The color temperatures above are simulated renditions of the color output produced as compared to a tungsten lamp at the specified color temperature. Chauvet makes no guarantee of the color output accuracy.

Configuration (Standalone)

Use standalone configuration to operate the product without a DMX controller.

Static Mode

The Static mode allows for an unchanging color without a DMX controller.

Virtual Color Wheel

1. Go to the **Virtual Color Wheel** main level.
2. Select **Virtual Color Wheel**.
3. Select the desired Rosco gel color (see [Virtual Color Wheel Chart](#)).
4. Select the desired output level (<000–255>).

Color Temperature

1. Go to the **Virtual Color Wheel** main level.
2. Select **Color Temperature**.
3. Select the desired color temperature (see [Preset Color Temperature Chart](#)).
4. Select the desired output level (<000–255>).

Manual Color Mixer

1. Go to the **Virtual Color Wheel** main level.
2. Select **Manual Color Mixer**.
3. Select the color to edit (**Red, Green, Blue, Amber, or Lime**).
4. Select the desired output level for that color (<000–255>).
5. Repeat steps 3 and 4 until product outputs as desired.

Auto Programs

Auto programs allow for dynamic blinder effects without a DMX controller.

1. Go to the **Auto Show** main level
2. Select the desired auto program (**Auto 1–9** or **Fade**).
3. Select the desired speed (**1–100**).



The auto programs cannot be edited.

Master/Slave

The Master/Slave mode allows a group of Ovation B-2805FC products (the slaves) to simultaneously duplicate the output of another Ovation B-2805FC (the master) without a DMX controller.

To set each of the slaves:

1. Go to the **Master/Slave** main level
2. Select **Slave**.

To set the master:

1. Go to the **Master/Slave** main level
2. Select **Master**.
3. Select an auto program as explained in Auto Programs, or a static setting.



- The master is the one that runs a program whether in Auto or Static mode.
- Do not connect a DMX controller to the products configured for Master/Slave operation. The DMX controller may interfere with signals from the master.
- The master should be the first product in the daisy chain.

Dimmer Profiles

This setting determines how fast the output of the Ovation B-2805FC changes when you modify the output value. This setting provides four different options to simulate the dimming curve of an incandescent lighting product.

1. Go to the **Dimmer Mode** main level.
2. Select a dimmer curve (**Off**, **Dimmer 1**, **Dimmer 2**, or **Dimmer 3**).



- Off:** The output is proportional (linear) to the dimmer channel value.
- Dimmer 1-3:** The output follows the dimmer value based on the corresponding dimmer curve, DIM1 being the fastest.

White Balance

This setting determines the maximum output values for each color, which affects the appearance of a full output white.

1. Go to the White Balance main level.
2. Select **Off** (the product will use a default setting) or **Manual**.
3. For **Manual** mode, select the color value to edit (**Red**, **Green**, **Blue**, **Amber**, or **Lime**).
4. Set the maximum value for the selected color (**125–255**).
5. Repeat steps 3 and 4 until the product outputs as desired.

LED Frequency

This option changes the Pulse Width Modulation (PWM) frequency of the LEDs on the Ovation B-2805FC.

1. Go to the **LED Frequency** main level.
2. Select PWM Frequency (**600Hz**, **1200Hz**, **2000Hz**, **4000Hz**, or **25Khz**).

Fan Mode

This setting determines how the fan speed on the Ovation B-2805FC is set.

1. Go to the **Fan Mode** main level
2. Select **Auto** (fan speed will increase or decrease based on product temperature), **On** (fan speed will always be at maximum), or **Off** (fan will always be off).



NOTICE: When operating in Fan Mode: Off, output of the fixture will be reduced and will not reach the same levels as when using other fan modes.



WARNING: When operating in Fan Mode: Off, the fixture will become hotter to the touch than when using other fan modes. Use proper protective equipment to prevent burns. Keep a safe distance from flammable objects.

Display Orientation

This setting allows for selection of the display orientation.

1. Go to the **Display** main menu,
2. Select **Normal** (upright display) or **Inverse** (inverted display).

Back Light

This setting allows for selection of the amount of time the backlight on the Ovation B-2805FC's display stays on after the last button is pressed on the control panel.

1. Go to the **Back Light** main level.
2. Select **On** (remains on), **10S** (10 seconds), **20S** (20 seconds), or **30S** (seconds).

System Information

This option displays the total number of hours the product has run, the installed software version, and the product's UID.

1. Go to the **Information** main level.
2. Select **Fixture Hours, Version, Device ID, or UID**.

Factory Reset

This option restores the Ovation B-2805FC to factory default settings.

1. Go to the **Factory Setting** main level.
2. Select **No** or **Yes**.

Web Server

The Ovation B-2805FC Web Server can be accessed by any computer on the same network as the product. It allows network access to system information, settings such as control protocol and starting address, color output testing, and the ability to change the Web Server password.

1. Connect the product to a Windows computer with a network cable.
2. On the computer, set the IP address of the new network to have the same first 3 digits as the IP address of the product (See [IP Address](#)).
3. Enter the IP address of the product into the URL bar of a web browser on the computer.
4. Enter both the User Name and Password as **admin** to log in.

Home

The Web Server Home page displays the details of all available control protocols, as well as the technical specifications for the Ovation B-2805FC.

Settings

The Web Server Settings page provides options for control. From the drop-down menus, the Protocol, Universe, IP Address, Start Address, Personality, Dimmer Mode, and PWM Frequency can all be edited. Click **Save Settings** to send the new configuration to the product.

Output

On the Web Server Output page, an output test of the product's LEDs can be performed, by either editing the values of each LED manually (by typing the number or moving the fader), or by selecting a sample color. The page will show the currently output color on the bottom left. To stop the output test, click **Click to Stop**.

Security

The Web Server Security page gives the option to change the password to the connected product's web server. Enter the old password (**admin**, by default) and the new password twice, then click **Save Settings** to change the password.

5. TECHNICAL INFORMATION

Product Maintenance

To maintain optimum performance and minimize wear, clean this product frequently. Usage and environment are contributing factors in determining the cleaning frequency.

Clean this product at least twice a month. Dust build-up reduces light output performance and can cause overheating. This can lead to reduced light source life and increased mechanical wear.

To clean the product:

1. Unplug the product from power.
2. Wait until the product is at room temperature.
3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external vents.
4. Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
5. Apply the solution directly to a soft, lint free cotton cloth or a lens cleaning tissue.
6. Softly drag any dirt or grime to the outside of the transparent surface.
7. Gently polish the transparent surfaces until they are free of haze and lint.



Always dry the transparent surfaces carefully after cleaning them.



Do not spin the cooling fan using compressed air because you could damage it.

6. TECHNICAL SPECIFICATIONS

Dimensions and Weight

LENGTH	WIDTH	HEIGHT	WEIGHT
69 in (1,753 mm)	8.26 in (210 mm)	8.13 in (207 mm)	45.4 lb (20.5 kg)

Note: Dimensions in inches rounded to the nearest decimal digit.

Power

POWER SUPPLY TYPE	RANGE	VOLTAGE SELECTION
Switching (internal)	100 to 240 VAC, 50/60 Hz	Auto-ranging

PARAMETER	120 V, 60 Hz	208 V, 60 Hz	230 V, 50 Hz
Consumption	620 W	601 W	597 W
Operating Current	5.16 A	2.98 A	2.76 A
Power linking current (products)	13.6 A (2 products)	13.6 A (3 products)	13.6 A (4 products)

POWER I/O	U.S./WORLDWIDE	UK/EUROPE
Power input connector	Neutrik® powerCON® A	Neutrik® powerCON® A
Power output connector	Neutrik® powerCON® B	Neutrik® powerCON® B
Power Cord plug	Edison (U.S.)	Local Plug

Light Source

TYPE	POWER	LIFESPAN
LED	8 W	50,000 hours

COLOR	QUANTITY	CURRENT
Hex-color RGBAL	280	740 mA

Photometrics

PARAMETER	VALUE	PARAMETER	VALUE
Color Temperature Range	2800 K to 6500 K	Installed Optics	20°
Beam Angle (horizontal)	25°	Beam Angle (horizontal w/ filter)	52°
Beam Angle (vertical)	20°	Beam Angle (vertical w/ filter)	20°
Field Angle (horizontal)	42°	Field Angle (horizontal w/ filter)	83°
Field Angle (vertical)	40°	Field Angle (vertical w/ filter)	40°
Illuminance @ 5 m	5,586 lux	Illuminance @ 5 m (w/ filter)	2,320
Selectable PWM	600 Hz, 1200 Hz, 2000 Hz, 4000 Hz, 25,000 Hz		

Thermal

MAXIMUM EXTERNAL TEMPERATURE	COOLING SYSTEM
113 °F (45 °C)	Fan-assisted convection

Control

PROTOCOL	I/O CONNECTOR	CHANNEL RANGE
DMX	3- and 5-pin XLR Amphenol etherCON®	1 Cell: 3, 3, 4, 5, 8, 9, 10, 10, 17
Art-Net™		2 Cell: 6, 8, 10, 15, 17, 19, 20, 31
sACN		3: Cell: 15, 20, 25, 33, 38, 43, 50, 70
		10 Cell: 30, 40, 50, 63, 73, 83, 100, 135

Ordering

PRODUCT NAME	ITEM NAME	ITEM CODE	UPC NUMBER
Ovation B-2805FC	OVATIONB2805FC	03031209	781462215576



RETURNS

Send the product prepaid, in the original box, and with the original packing and accessories. Chauvet will not issue call tags.

Call Chauvet and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause(s) for the return.

Clearly label the package with an RMA number. Chauvet will refuse any product returned without an RMA number.



Write the RMA number on a properly affixed label. DO NOT write the RMA number directly on the box.

Once you have the RMA number, provide the following information on a piece of paper and place it inside the box:

- Your name
- Your address
- Your phone number
- RMA number
- A brief description of the problem

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be your responsibility. FedEx packing or double-boxing are recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).

CONTACT US

World Headquarters	
General Information	Technical Support
Address: 5200 NW 108th Ave. Sunrise, FL 33351 Voice: (954) 577-4455 Fax: (954) 929-5560 Toll Free: (800) 762-1084	Voice: (954) 577-4455 (Press 4) Fax: (954) 756-8015 Email: tech@chauvetlighting.com
	Website
	www.chauvetlighting.com
EUROPE	
General Information	Technical Support
Address: Stokstraat 18 9770 Kruishoutem Belgium Voice: +32 9 388 93 97	Email: eutech@chauvetlighting.eu
	Website
	www.chauvetlighting.eu
General Information	Technical Support
Address: Unit 1C Brookhill Road Industrial Estate Pinxton, Nottingham, UK NG16 6NT Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110	Email: uktech@chauvetlighting.com
	Website
	www.chauvetlighting.co.uk
MEXICO	
General Information	Technical Support
Av. de las Partidas 34 - 3B, Zona Industrial Lerma Lerma, Edo. de México, CP 52000 Voice: +52 (728) 285-5000	Email: servicio@chauvet.com.mx
	Website
	www.chauvet.com.mx

Visit the applicable website above to verify our contact information and instructions to request support. Outside the U.S., United Kingdom, Ireland, Mexico or Benelux, contact the dealer of record.